



# **Network Video Recorder**

**User Manual**

## Legal Information

©2022 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

### About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hikvision website ( <https://www.hikvision.com/> ).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

### Trademarks

**HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.

Other trademarks and logos mentioned are the properties of their respective owners.



: The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

### Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT

## Network Video Recorder User Manual

---

INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATTER PREVAILS.

## Regulatory Information

### FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

#### FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

### EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the RE Directive 2014/53/EU, the EMC Directive 2014/30/EU, LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the

purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: <http://www.recyclethis.info> .



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: <http://www.recyclethis.info> .

### Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.




## Applicable Model

This manual is applicable to the following models.

Series	Model
DS-7100NI-K1/W/M	DS-7104NI-K1/W/M
	DS-7108NI-K1/W/M
DS-7100NI-K1/W/M(C)	DS-7104NI-K1/W/M(C)
	DS-7108NI-K1/W/M(C)
DS-7600NI-L1/W	DS-7604NI-L1/W
	DS-7608NI-L1/W

## Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 <b>Danger</b>	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 <b>Caution</b>	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 <b>Note</b>	Provides additional information to emphasize or supplement important points of the main text.

 
## Safety Instruction

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- Firmly connect the plug to the power socket. Do not connect several devices to one power adapter. Power off the device before connecting and disconnecting accessories and peripherals.
- Shock hazard! Disconnect all power sources before maintenance.
- The equipment must be connected to an earthed mains socket-outlet.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- ⚡ indicates hazardous live and the external wiring connected to the terminals requires installation by an instructed person.
- Never place the equipment in an unstable location. The equipment may fall, causing serious personal injury or death.
- Input voltage should meet the SELV (Safety Extra Low Voltage) and the LPS (Limited Power Source) according to the IEC62368.
- High touch current! Connect to earth before connecting to the power supply.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- Use the device in conjunction with an UPS, and use factory recommended HDD if possible.
- This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- This equipment is not suitable for use in locations where children are likely to be present.
- CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
- Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).
- Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.
- Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.
- Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.
- Dispose of used batteries according to the instructions.
- Keep body parts away from fan blades and motors. Disconnect the power source during servicing.
- Keep body parts away from motors. Disconnect the power source during servicing.



## Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- The device is designed for indoor use only. Install it in a well-ventilated, dust-free environment without liquids.
- Ensure recorder is properly secured to a rack or shelf. Major shocks or jolts to the recorder as a result of dropping it may cause damage to the sensitive electronics within the recorder.
- The equipment shall not be exposed to dripping or splashing and that no objects filled with liquids shall be placed on the equipment, such as vases.
- No naked flame sources, such as lighted candles, should be placed on the equipment.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. The openings shall never be blocked by placing the equipment on a bed, sofa, rug or other similar surface.
- For certain models, ensure correct wiring of the terminals for connection to an AC mains supply.
- For certain models, the equipment has been designed, when required, modified for connection to an IT power distribution system.
-  identifies the battery holder itself and identifies the positioning of the cell(s) inside the battery holder.
- + identifies the positive terminal(s) of equipment which is used with, or generates direct current.
- - identifies the negative terminal(s) of equipment which is used with, or generates direct current.
- Keep a minimum 200 mm (7.87 inch) distance around the equipment for sufficient ventilation.
- For certain models, ensure correct wiring of the terminals for connection to an AC mains supply.
- Use only power supplies listed in the user manual or user instruction.
- The USB port of the equipment is used for connecting to a mouse, keyboard, USB flash drive, or Wi-Fi dongle only.
- Use only power supplies listed in the user manual or user instruction.
- Do not touch the sharp edges or corners.

# Contents

<b>Chapter 1 Startup .....</b>	<b>1</b>
1.1 Activate Your Device .....	1
1.2 Login .....	2
1.2.1 Set Unlock Pattern .....	2
1.2.2 Log in via Unlock Pattern .....	3
1.2.3 Log in via Password .....	3
<b>Chapter 2 Live View .....</b>	<b>5</b>
2.1 GUI Introduction .....	5
2.2 PTZ Control .....	6
2.2.1 Configure PTZ Parameter .....	6
2.2.2 PTZ Control Panel Introduction .....	8
2.2.3 Customize Preset .....	8
2.2.4 Customize Patrol .....	8
2.2.5 Customize Pattern .....	9
<b>Chapter 3 Playback .....</b>	<b>10</b>
3.1 GUI Introduction .....	10
3.2 Normal Playback .....	10
3.3 Event Playback .....	12
3.4 Back up Clip .....	13
<b>Chapter 4 Search File .....</b>	<b>14</b>
<b>Chapter 5 Configuration (Easy Mode) .....</b>	<b>15</b>
5.1 System Configuration .....	15
5.1.1 General .....	15
5.1.2 User .....	16
5.1.3 Exception .....	18
5.1.4 Display .....	19

5.2 Network Configuration .....	19
5.2.1 General .....	19
5.2.2 Hik-Connect .....	20
5.2.3 Email .....	21
5.3 Camera Management .....	23
5.3.1 Network Camera .....	23
5.3.2 OSD Settings .....	28
5.3.3 Event .....	29
5.4 Recording Management .....	35
5.4.1 Storage Device .....	35
5.4.2 Configure Recording Schedule .....	36
5.4.3 Configure Recording Parameter .....	38
5.5 Wi-Fi .....	38
<b>Chapter 6 Configuration (Expert Mode) .....</b>	<b>40</b>
6.1 System Configuration .....	40
6.1.1 General .....	40
6.1.2 Live View .....	42
6.1.3 User .....	44
6.1.4 Display .....	44
6.2 Network Configuration .....	45
6.2.1 TCP/IP .....	45
6.2.2 DDNS .....	46
6.2.3 NAT .....	46
6.2.4 NTP .....	47
6.2.5 Ports (More Settings) .....	48
6.2.6 ISUP .....	49
6.2.7 Hik-Connect .....	51
6.2.8 Email .....	51

6.3 Camera Management .....	51
6.3.1 Network Camera .....	51
6.3.2 Display Settings .....	57
6.3.3 Privacy Mask .....	58
6.4 Event Configuration .....	59
6.4.1 Normal Event .....	59
6.4.2 Smart Event .....	63
6.4.3 Configure Arming Schedule .....	69
6.4.4 Configure Alarm Linkage Action .....	69
6.5 Recording Management .....	72
6.5.1 Configure Recording Schedule .....	72
6.5.2 Configure Recording Parameter .....	74
6.5.3 Storage Device .....	75
6.5.4 Configure Storage Mode .....	77
6.5.5 Advanced Settings .....	78
6.6 Wi-Fi .....	79
<b>Chapter 7 Maintenance .....</b>	<b>80</b>
7.1 Restore Default .....	80
7.2 Search Log .....	80
7.3 System Service .....	80
7.4 Upgrade .....	81
7.4.1 Local Upgrade .....	81
7.4.2 Online Upgrade .....	82
7.5 View Wi-Fi Information .....	82
<b>Chapter 8 Alarm .....</b>	<b>83</b>
8.1 Set Event Hint .....	83
8.2 View Alarm in Alarm Center .....	83
<b>Chapter 9 Web Operation .....</b>	<b>84</b>

9.1 Introduction .....	84
9.2 Login .....	84
9.3 Live View .....	85
9.4 Playback .....	85
9.5 Configuration .....	86
9.6 Log .....	86
<b>Chapter 10 Appendix .....</b>	<b>87</b>
10.1 Glossary .....	87
10.2 Communication Matrix .....	88
10.3 Device Command .....	88

# Chapter 1 Startup

## 1.1 Activate Your Device

For the first-time access, you need to activate the video recorder by setting an admin password. No operation is allowed before activation. You can also activate the video recorder via web browser, SADP or client software.

### Before You Start

Power on your device.

### Steps

1. Select a language.
2. Click **Apply**.
3. Input the same password in **Password** and **Confirm Password**.



### Warning

Strong Password recommended-We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

- 
4. Activate network camera(s) connected to the device.
    - Check **Use the Device Password** to use the device password to activate the inactive network camera(s).
    - Enter a password in **Camera Activation Password** to activate network camera(s).
  5. Select the country for Wi-Fi..
  6. Click **Activate**.

\*User Name admin

\*Password

\*Confirm Password

\*Camera Activation Password

Use the Device Password

Figure 1-1 Activation

### What to do next

Follow the wizard to set basic parameters.

- When you forget your password, there are three methods to reset it, including password resetting email, Hik-Connect, and security questions. You have to configure at least one password resetting method. Refer to **Set Password Resetting Email** and **Hik-Connect** for details.
- For unlock pattern. Refer to **Set Unlock Pattern** for details.
- For general system parameters. Refer to **General** for details.
- For general network parameters. Refer to **General** for details.
- For storage device configuration. Refer to **Storage Device** for details.
- For adding network cameras. Refer to **Network Camera** for details.
- For Wi-Fi Match. Refer to **Add Wi-Fi Camera** for details.
- For platform configuration. Refer **Hik-Connect** to for details.

## 1.2 Login

### 1.2.1 Set Unlock Pattern

Admin user can use the unlock pattern to login. You can configure the unlock pattern after the device is activated.

#### Steps


1. Use the mouse to draw a pattern among the 9 dots on the screen. Release the mouse when the pattern is done.

---

#### Note

- The pattern shall have 4 dots at least.
- Each dot can be connected for once only.

2. Draw the same pattern again to confirm it.

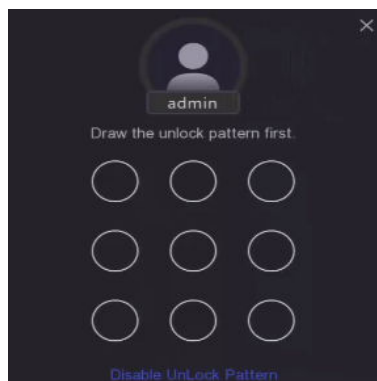


**Figure 1-2 Set Unlock Pattern**

When the two patterns match, the pattern is configured successfully.

## 1.2.2 Log in via Unlock Pattern

### Steps

1. Right click the mouse on live view.

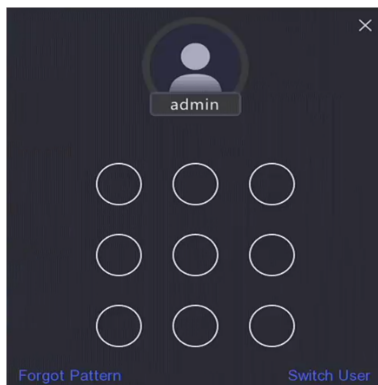

**Figure 1-3 Draw the Unlock Pattern**

2. Draw the pre-defined pattern to enter the menu operation.

---

### Note

- If you have forgotten your pattern, you click **Forgot My Pattern** or **Switch User** to log in via password.
  - If you have drawn the wrong pattern for more than 5 times, the system will switch to the normal login mode automatically.
- 


## 1.2.3 Log in via Password

If your video recorder has logged out, you must login before operating the menu and other functions.

### Steps

1. Select **User Name**.



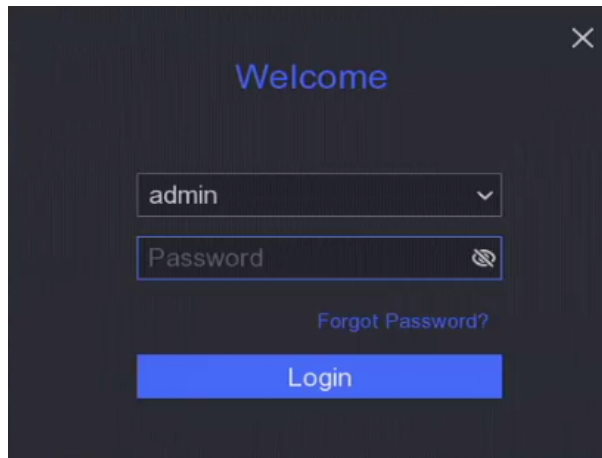

**Figure 1-4 Login Interface**

2. Input password.
3. Click **Login**.

---

 **Note**

- When you forget the password of the admin, you can click **Forgot Password** to reset the password.
  - If you enter the wrong password 7 times, the current user account will be locked for 60 seconds.
-

## Chapter 2 Live View

### 2.1 GUI Introduction









- Click  to start/stop auto-switch. The screen will automatically switch to the next one.
- Right click a camera, or click  to enter full screen mode.
- Double click a camera to view it in single-screen mode. Double click again to exit single-screen mode.
- When an error occurs, the screen will display the error description. For some errors, you can click the screen to directly access the resolving operations.
- Change a camera live view screen by dragging it from its screen to the desired screen.
- Scroll up/down to turn to previous/next screen.
- Click  to enter temperature detection interface. After specified thermal cameras are connected, you can view the captured face pictures and temperature detection results.
- Position the cursor on a camera to show shortcut menu.





Figure 2-1 Shortcut Menu

Table 2-1 Shortcut Menu Description

Button	Description
	Start playing videos recorded in the latest five minutes.
	Digital zoom. You can adjust zoom-in times and view the desired area.
	Click it to enter PTZ control mode.
	Turn on/off live view audio.
	Switch video stream.

- In the live view interface, there are icons at the upper-right corner of the screen for each camera, showing the camera recording and alarm status.

Table 2-2 Live View Icon Description

Icon	Description
	Alarming (normal event and smart event).
	Recording.

- Right click your mouse to display the shortcut menu. Provided options are as follows:

**Table 2-3 Right-Click Shortcut Menu**


Selection	Description
<b>Full Screen</b>	Full image screen.
<b>Single Screen</b>	Select channel to start single screen live view.
<b>Window Division</b>	Split the screen.
<b>Previous Screen</b>	Click to access the previous screen.
<b>Next Screen</b>	Click to access the next screen.
<b>Start Auto-Switch</b>	Start screen auto-switch.
<b>Add IP Camera</b>	Click to add IP camera as you desire.
<b>Playback</b>	Go to playback interface.
<b>PTZ Control</b>	Click to access PTZ Control
<b>Wi-Fi Match</b>	Search and add available Wi-Fi cameras.

## 2.2 PTZ Control

### 2.2.1 Configure PTZ Parameter


You shall configure PTZ parameters before controlling a PTZ camera.

#### Steps

1. Preview a camera in live view and click  on shortcut menu.



**Figure 2-2 PTZ Settings**

2. Click .
3. Set the PTZ camera parameters.

---

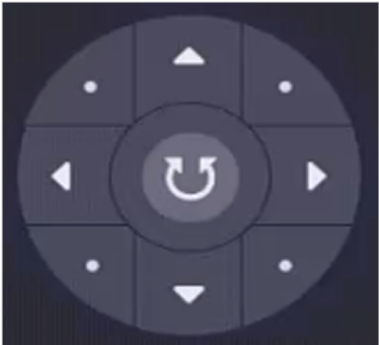




 **Note**

All parameters should be the same as the PTZ camera.

4. Click **OK**.

## 2.2.2 PTZ Control Panel Introduction



Table 2-4 PTZ Panel Description

Icon	Description
	Direction buttons, and the auto-cycle button.
	The speed of the PTZ movement.
	Zoom -/+.
	Focus -/+.
	Iris -/+.

## 2.2.3 Customize Preset

Set a preset location where the PTZ camera would point to when an event occurs.

### Steps

1. Preview a camera in live view and click  on shortcut menu.
2. Select a desired preset in preset list.
3. Use direction buttons to wheel the camera to required locations. Adjust zoom and focus as your desire.
4. Click .


### What to do next



Double click a preset in the preset list to call it.


## 2.2.4 Customize Patrol

Patrol refers to a path consists of a series of presets with designated sequence. It provides dynamic live image for monitoring several presets.

### Steps

1. Preview a camera in live view and click on  shortcut menu.


2. Click **Patrol**.
3. Click  of a desired patrol.
4. Click .
5. Configure key point parameters, such as the key point No., duration of staying for one key point and speed of patrol. The key point is corresponding to the preset. The preset number determines the order at which the PTZ will follow while cycling through the patrol. **Duration** refers to the time span to stay at the corresponding key point. **Speed** defines the speed at which the PTZ will move from one key point to the next.

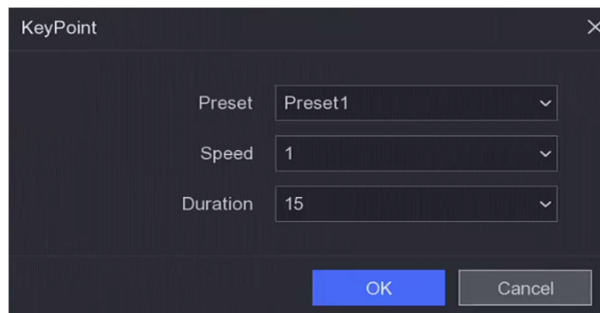

**Figure 2-3 Patrol Settings**

6. Click **OK**.
7. Click **Save**.




### What to do next

Select a patrol and click  to call it. The PTZ camera will move according the predefined patrol path.


## 2.2.5 Customize Pattern

A pattern records the movement path and dwell time in a certain position. When you call a pattern, the PTZ camera will move according to the recorded path.

### Steps

1. Preview a camera in live view and click  on shortcut menu.
2. Click **Pattern**.
3. Select a pattern.
4. Click .
5. Use direction buttons to wheel the camera to required locations. Adjust zoom and focus as your desire.
6. Click . The previous PTZ camera moving path is recorded as a pattern.

### What to do next

Select a pattern and click  to call it. The PTZ camera will move according the predefined pattern.

# Chapter 3 Playback

## 3.1 GUI Introduction

Go to Playback .



Figure 3-1 Playback

Table 3-1 Playback Interface Description

Button	Operation	Button	Operation
	30 s reverse.		30 s forward.
	Full screen.		Start playback.
	Speed down.		Speed up.
	Speed.		



Figure 3-2 Timeline

- Position the cursor on the timeline, drag the timeline to position to a certain time.
- Period marked with blue bar contains video. Red bar indicates the video in the period is event video.
- Scroll up/down to zoom out/in timeline.

## 3.2 Normal Playback



Play back normal videos.

## Steps

1. Go to **Playback** .
2. Select a camera from the camera list.
3. Select a date on the calendar for playback.

 
---

### Note

The blue triangle at the calendar date corner indicates there are available videos. For example,  means video is available.  means no video.


 
 
 






---

4. **Optional:** Position the cursor on playback window to show control bar.



**Figure 3-3 Control Bar**

**Table 3-2 Button Description**

Button	Description	Button	Description
	Window division, group the channels and play.		Zoom in/out playback image.
	Turn on/off audio.		Add tag.
	Lock/unlock video.		Clip video.
	Show videos that contain human.		Show videos that contain vehicle.
<b>Skip Normal Videos</b>	If you have clicked  /  , the device will hide other videos, and only show and play videos that contain human or vehicle during playback.		



### 3.3 Event Playback

When you select the event playback mode, the system will analyze and mark videos that contain the motion detection, line crossing detection, or intrusion detection information, .

#### Before You Start

- Ensure the camera has enabled **Dual-VCA**. You can enable it via the camera web browser interface in **Configuration → Video/Audio → Display Info. on Stream** .
- Ensure your video recorder has enabled **Save VCA Data**. You can enable it in **Configuration → Record → Advanced** .

#### Steps

1. Go to **Playback** .
2. Click **Event**.
3. Select a camera.



Figure 3-4 Event Playback

4. Position the cursor on playback window to show control bar.

Table 3-3 Button Description

Button	Description	Button	Description
	Add tag.		Zoom in/out playback image.
	Clip video.		Lock/unlock video.
	Configure detection area.		Turn on/off audio.

5. Click to set detection areas of line crossing detection, intrusion detection, or motion detection.
6. Click to search videos. Videos meet the detection rule requirement will be marked in red.
7. Click to configure the play strategy.

#### Do not Play Normal Videos

If it is enabled, videos without smart information will not be played.

### Normal Video

Set normal video playback speed. The option is only valid when **Do not Play Normal Videos** is unchecked.

### Play Speed of Smart/Custom Video

Set playback speed of videos with smart information. The option is only valid when **Do not Play Normal Videos** is enabled.

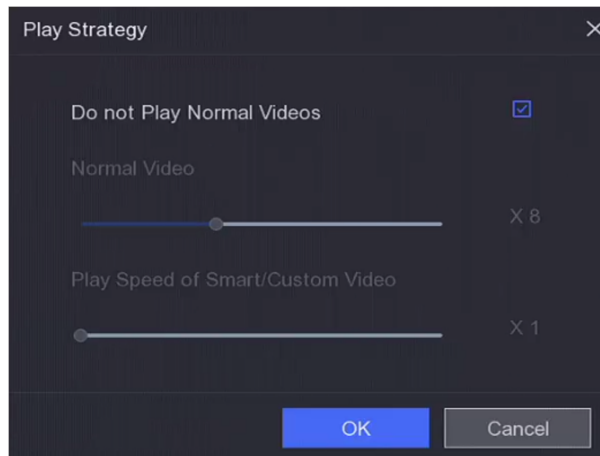


Figure 3-5 Play Strategy


## 3.4 Back up Clip

You can clip videos during playback. Video clips can be exported to the backup device (USB flash drive, etc.).

### Before You Start

Connect a backup device to your video recorder.

### Steps

1. Start playback. Refer to **Normal Playback** for details.
2. Click .
3. Set the start and end time. You can also adjust cursors on the time bar to set the time period.
4. Click **Save**.
5. Select the backup device and folder.
6. Click **Save** to export the clip to backup device.

## Chapter 4 Search File

### Steps

1. Go to Search .

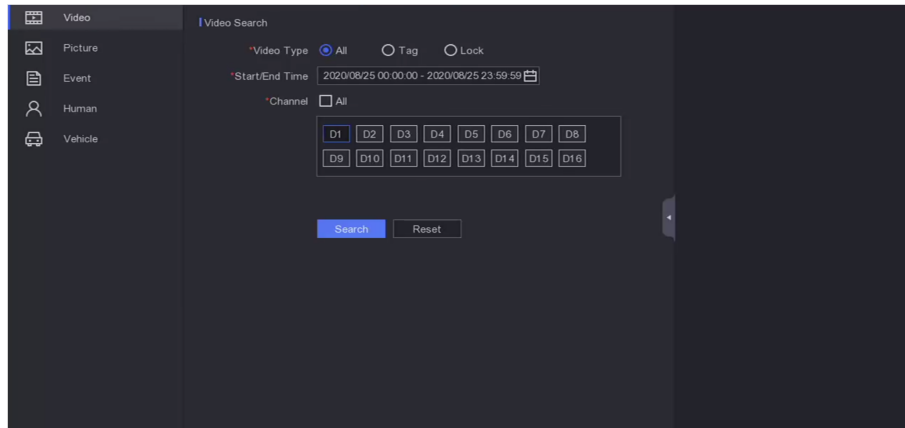




Figure 4-1 Search

2. Select a search type (video, picture, event, etc.).

3. Set search conditions.

4. Click **Search**.

- Click  to play the video.
- Click  to lock the file. Locked file will not be overwritten.
- Select file(s), and click **Export** to export file(s) to backup device.

## Chapter 5 Configuration (Easy Mode)

Easy mode contains basic configurations. Go to **Configuration** , and click **Easy Mode**.


### 5.1 System Configuration

#### 5.1.1 General

You can configure the output resolution, system time, etc.

##### Steps

1. Go to **Configuration** → **System** → **General** .

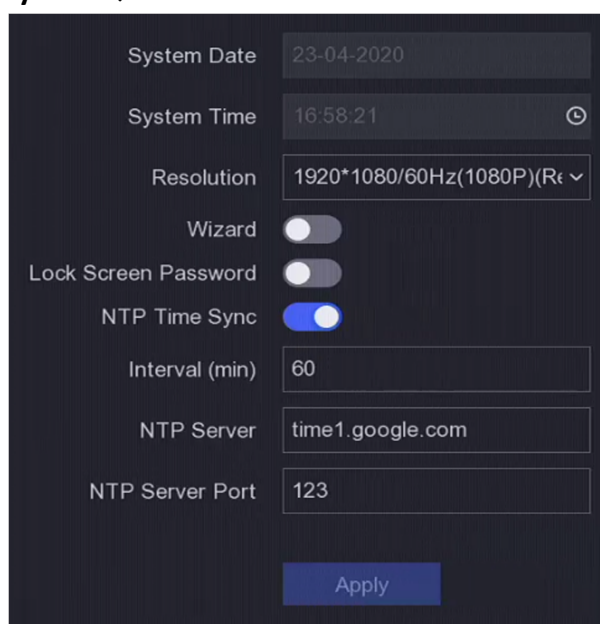

**Figure 5-1 General Settings**

2. Configure the parameters as your desire.

##### **Wizard**

The wizard will pop up after the device starts up.

##### **Lock Screen Password**

You need to enter your password if the screen is locked.

##### **NTP Time Sync**

Network time protocol (NTP) is a networking protocol for time synchronization. The device can connect to NTP (network time protocol) server to sync time.

##### **Interval (min)**

Time interval between two time synchronization with NTP server.

## NTP Server

IP address of the NTP server.

3. Click **Apply**.


## 5.1.2 User

### Add User

There is a default account: Administrator. The administrator user name is **admin**. Administrator has the permission to add, delete, and edit user. Guest user only has live view, playback, and log search permission.

#### Steps

1. Go to **Configuration** → **System** → **User** .
2. Click **Add** and confirm your admin password.

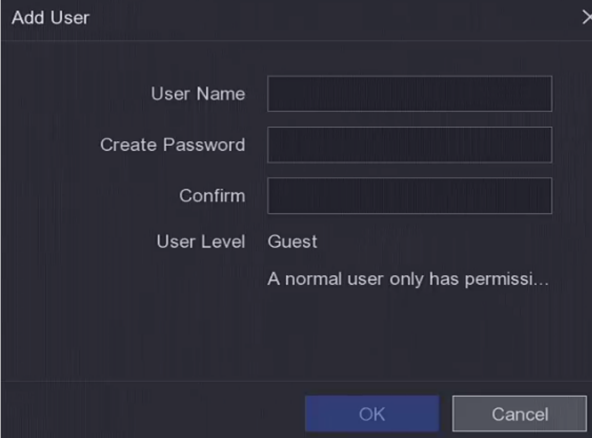



**Figure 5-2 Add User**

3. Enter user name.
4. Enter the same password in **Password** and **Confirm**.

---

### **Warning**

We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

5. Click **OK**.
  - Click  /  to edit/delete user.

## Set Password Resetting Email

When you forget your login pattern and password, the device will send an email contains verification code to your email for password resetting.


### Steps

1. Go to **Configuration → System → User** .
2. Click **Password Resetting Email**.
3. Enter admin password for authorization.
4. Enter an email address.
5. Click **OK**.

## Edit Unlock Pattern

Admin user can use the unlock pattern to log in. You can change the unlock pattern or disable the unlock pattern.

### Steps

1. Go to **Configuration → User** .
2. Click  .
3. Enter the admin password.
4. Click **Unlock Pattern**.
5. Turn on/off the function as your desire.
6. Set the unlock pattern if the function is enabled.
  - 1) Use the mouse to draw a pattern among the 9 dots on the screen. Release the mouse when the pattern is done.



### Note

- The pattern shall have 4 dots at least.
- Each dot can be connected for once only.


- 
- 2) Draw the same pattern again to confirm it.

7. Click **OK**.

## Edit Password

If you have the device password, you can change it to a new one. The admin user can change the passwords of other users.

### Steps

1. Go to **Configuration → User** .
2. Edit password.
  - For guest user, enter the old password and new password.
  - For admin user, click  to set a new password.

3. Click **OK**.

 **Note**

If you have changed the admin password, the previous unlock pattern would be cleared.

---

## Reset Password

You can reset your password when you forgot your login pattern and password.


### Steps

1. Click **Forgot Password** at the password login interface.
2. Click **Next** if you agree the Privacy Policy, you can scan the QR code to read it.
3. Follow the wizard to reset password.

## 5.1.3 Exception

You can receive exception events hint in alarm center, and set exception linkage actions.

### Steps

1. Go to **Configuration → System → Exception** .
2. **Optional:** Configure event hint. When the set events occur, you will receive hints in alarm center.
  - 1) Enable **Event Hint**.
  - 2) Click  at the upper-right corner of local menu to enter alarm center.
  - 3) Select an event type.
  - 4) Click **Set** to select events to hint.
3. Set **Exception Type**
4. Select **Normal Linkage** and **Trigger Alarm Output** type for exception linkage actions.

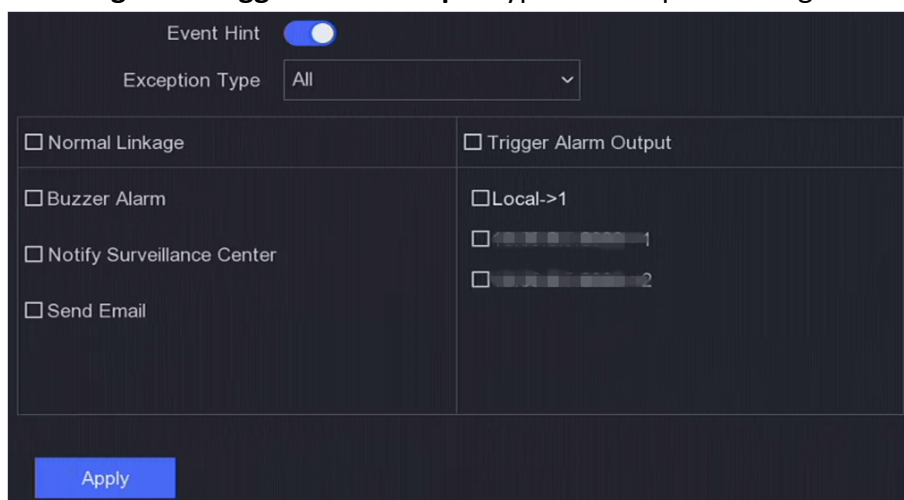


Figure 5-3 Exceptions

5. Click **Apply**.

## 5.1.4 Display

The LCD screen brightness and screen off time can be configured.

### Steps

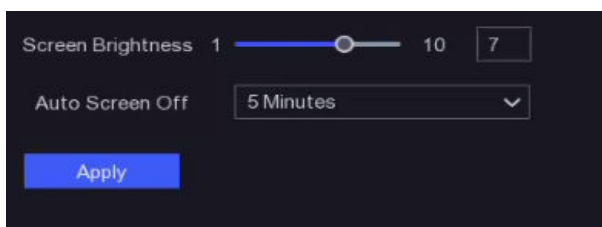


This function is only available for the devices with LCD display.

---

#### 1. Go to **Configuration** → **System** → **Display** .

Display Settings



#### 2. Configure **Screen Brightness** and **Auto Screen Off** as your desire.

##### **Screen Brightness**

The LCD screen brightness.

##### **Auto Screen Off**

The LCD screen will automatically turn off after the device is idle for a specified time. You can press the power button at the device side panel or move your mouse to light up the screen.



If you press the power button for more than 5 seconds, your device will be shut down.

---

#### 3. Click **Apply**.

## 5.2 Network Configuration


### 5.2.1 General

You shall properly configure the network settings before operating the device over network.

#### Steps

##### 1. Go to **Configuration** → **Network** → **General** .



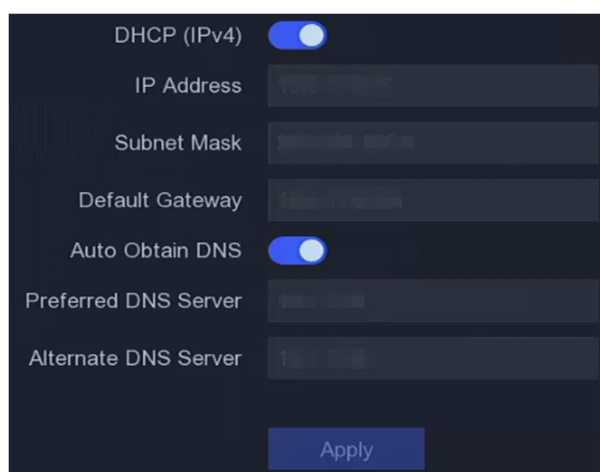

**Figure 5-4 Network**

2. Set network parameters.

### **DHCP**

If the DHCP server is available, you can enable **DHCP** to automatically obtain an IP address and other network settings from that server.

### **Auto Obtain DNS**

If **DHCP** is enabled. You can enable **Auto Obtain DNS** to automatically obtain **Preferred DNS Server** and **Alternate DNS Server**.

3. Click **Apply**.

## **5.2.2 Hik-Connect**

Hik-Connect provides mobile phone application and platform service to access and manage your connected devices, which enables you to get a convenient remote access to the surveillance system.

### **Steps**

1. Go to **Configuration → Network → Hik-Connect** .

2. Turn on **Enable**. The service terms will pop up.

1) Scan the QR code to read the service terms and privacy statement.

2) Check **I have read and agree to Service Terms and Privacy Statement**. if you agree with the service terms and privacy statement..

3) Click **OK**.

3. Click  to set verification code.

4. **Optional**: Enable **Platform Time Sync**, the device will sync time with the platform server instead of NTP server.

5. **Optional**: Enable **Stream Encryption**. It requires to enter verification code in remote access and live view after this function is enabled.

6. **Optional**: Edit **Server IP**.

### 7. Bind your device with a Hik-Connect account.

- 1) Use a smart phone to scan the QR code, and download Hik-Connect app. You can also download it from <https://appstore.hikvision.com> , or the QR code below. Refer to *Hik-Connect Mobile Client User Manual* for details.




Figure 5-5 Download Hik-Connect

- 2) Use Hik-Connect to scan the device QR, and bind the device.

---

#### Note

- If the device is already bound with an account, you can click **Unbind** to unbind with the current account.
- You can also use the QR code in  at the upper-left corner to download Hik-Connect and bind your device.

---

### 8. Click **Apply**.

#### Result

- If your device is connected with Hik-Connect platform, **Connection Status** will be **Online**.
- If your device is bound with a Hik-Connect account, **Bind Status** will be **Yes**.

#### What to do next

You can access your video recorder via Hik-Connect.

### 5.2.3 Email

Set an email account to receive event notification.

#### Before You Start

- Ensure SMTP service is available for your email.
- Configure your network parameters. Refer to ***General*** for details.

#### Steps

1. Go to **Configuration** → **Network** → **Email** .

The screenshot shows a dark-themed configuration window for email settings. At the top, there is a 'Server Authentication' toggle switch which is turned on. Below it are two text input fields for 'User Name' and 'Password'. The 'SMTP Server' is set to 'mail.domainname.com' and the 'SMTP Port' is '25'. There are two more toggle switches: 'SSL/TLS' (turned off) and 'Attached Picture' (turned on). The 'Sender' field contains 'user1', and the 'Sender's Address' field contains 'user1@hotmail.com'. A dropdown menu for 'Select Receivers' is set to 'Receiver 1'. The 'Receiver' field contains 'user2', and the 'Receiver's Address' field contains 'user2@hotmail.com'.

**Figure 5-6 Email**

## 2. Set email parameters

### **Server Authentication**

Check it to enable the server authentication feature.

### **User Name**

The user account of email sender for SMTP server authentication.

### **Password**

The password of email sender for SMTP server authentication.

### **SSL/TLS**

(Optional) Enable SSL/TLS if it is required by the SMTP server.

### **Attached Picture**

(Optional) If events are triggered, it will send images as email attachment.

### **Sender**

The sender name.

### **Sender's Address**

The sender's email address.

### **Select Receiver**

Select a receiver. Up to 3 receivers are available.

### **Receiver**

The receiver name.

### Receiver's Address

The receiver's email address.

---



#### Note

For network cameras, the event images are directly sent as the email attachment. One network camera only sends one picture.

---

**3. Optional:** Click **Test** to send a test email.

**4.** Click **Apply**.

## 5.3 Camera Management

### 5.3.1 Network Camera

#### Add Network Camera Through Wi-Fi

##### Add Wi-Fi Camera

You can use Wi-Fi match function to search Wi-Fi cameras that are not activated, and add them to the device automatically. Select **Wi-Fi Match** from the right-click menu in live view mode, and the device will search and add Wi-Fi cameras. The process will take about 2 minutes. The Wi-Fi camera will use **IP Camera Activation Password** as its password. (Refer to [\*\*\*Activate Your Device\*\*\*](#) )

---



#### Note

- It is recommended to keep the distance between Wi-Fi camera and device within 50 meters.
  - Only certain Wi-Fi camera models and versions support this function.
  - Ensure the Wi-Fi camera is powered on, not activated, and has not been connected with other devices via network cable.
  - In a kit, Wi-Fi camera will connect to the NVR automatically.
- 

#### Configure Camera as Repeater

The connected Wi-Fi cameras can be set as repeaters to extend the wireless network connection distance.

##### Before You Start

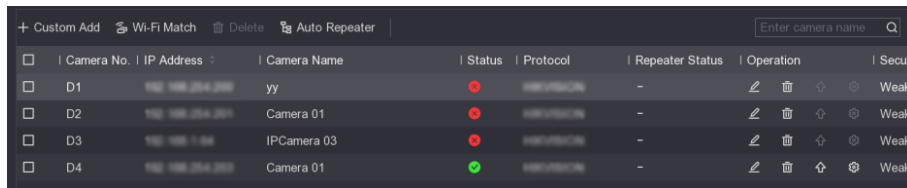
- Ensure your Wi-Fi cameras support this function.
- Before installing Wi-Fi cameras, you have to configure the repeater function first.

## Steps

### Note

Only certain video recorder models support this function.

1. Add Wi-Fi cameras to the device through wireless network. Refer to **Add Wi-Fi Camera** for details.
2. Go to **Configuration → Camera → IP Camera**.



Camera No.	IP Address	Camera Name	Status	Protocol	Repeater Status	Operation	Security
D1	192.168.254.255	yy	Offline	HTTP	-	✎ ✖ ↕ ⚙	Weak
D2	192.168.254.255	Camera 01	Offline	HTTP	-	✎ ✖ ↕ ⚙	Weak
D3	192.168.1.64	IPCamera 03	Offline	HTTP	-	✎ ✖ ↕ ⚙	Weak
D4	192.168.254.255	Camera 01	Online	HTTP	-	✎ ✖ ↕ ⚙	Weak

Figure 5-7 Configure Camera as Repeater

3. Turn on the switch(s) in **Auto Repeater** of Wi-Fi camera(s) as your desire.

### Note

- The repeater camera and repeated camera shall both enable this function.
- Only two layers are allowed for the topology.

4. **Optional:** Click **Enable Repeater** or **Disable Repeater** to enable or disable the repeater function of all cameras.

## Add Network Camera by Device Password

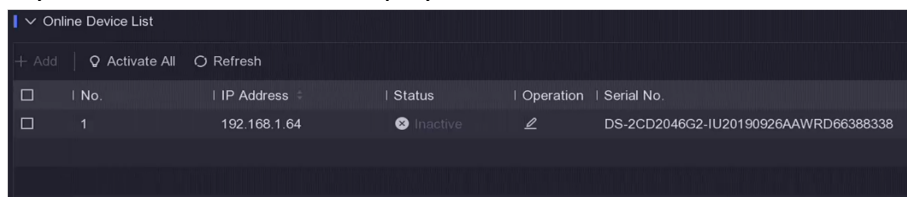
Add network cameras which the password is the same as your video recorder.

### Before You Start

- Ensure your network camera is on the same network segment with your video recorder.
- Ensure the network connection is valid and correct. Refer to **General** for details.
- Ensure the network camera password is the same as your video recorder.

## Steps

1. Go to **Configuration → Camera → IP Camera**. The online cameras on the same network segment with your video recorder are displayed in **Online Device List**.



No.	IP Address	Status	Operation	Serial No.
1	192.168.1.64	Inactive	✎	DS-2CD2046G2-IU20190926AAWRD66388338

Figure 5-8 IP Camera Management Interface

2. Select a desired network camera.
3. Click **+** to add the camera.

---

 **Note**

If the camera is inactive, the device will activate it automatically with the password you have set during device activation.


---

## Add Network Camera Manually

### Before You Start

- Ensure your network camera is on the same network segment with that of your video recorder.
- Ensure the network connection is valid and correct.
- Ensure the network camera is activated.

### Steps

1. Go to **Configuration** → **Camera** → **IP Camera** .
2. Click  in **Added Device List**.
3. Set network camera parameters, including IP address, protocol, management port, etc.
4. **Optional:** Enable **Use Camera Activation Password** to use the device password to add network camera(s).
5. **Optional:** Click **Add More** to add another network camera.
6. Click **Add**.

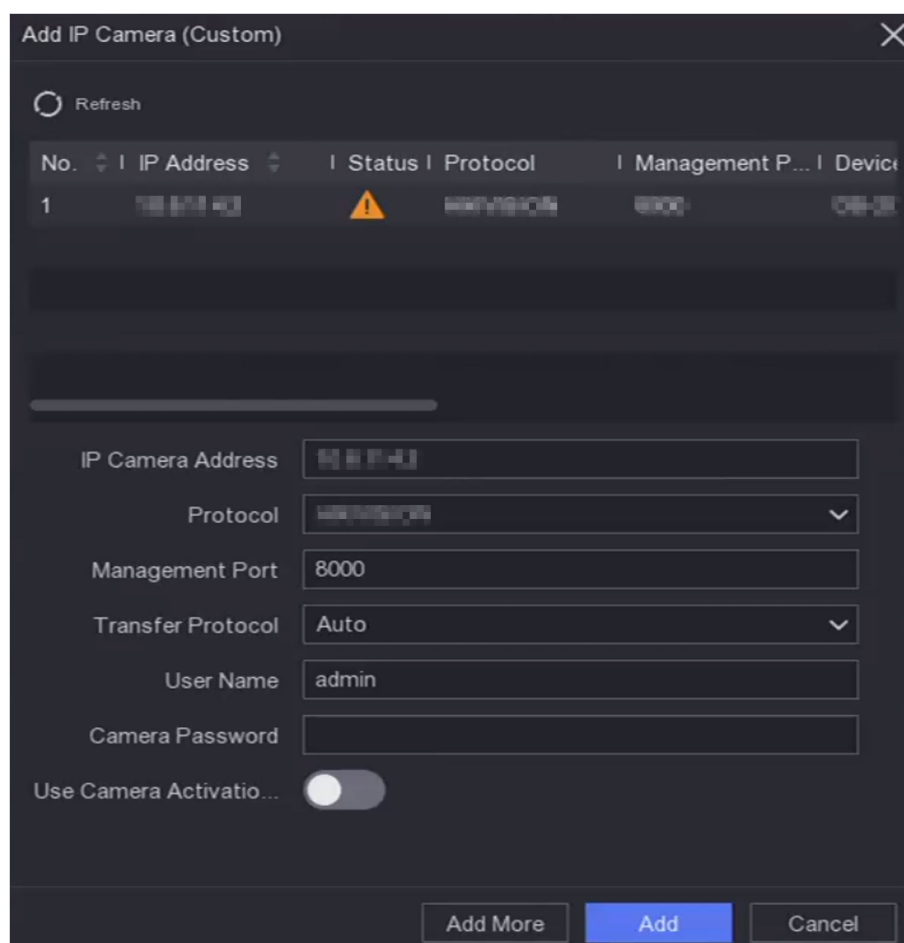
 


Figure 5-9 Add Network Camera

## Edit Connected Network Camera

You can edit the IP address, protocol and other parameters of the added network cameras.

### Steps

1. Go to **Configuration** → **Camera** → **IP Camera** .
2. Click  to edit the selected camera.

### Channel Port

If the connected device is an encoding device with multiple channels, you can select the channel port No. to choose a connecting channel.

3. Click **OK**.


## Upgrade Network Camera

The Network camera can be remotely upgraded through the device.

## Before You Start

- Ensure you have inserted the USB flash drive to the device, and it contains the network camera upgrade firmware.
- Ensure your network camera is on the same network segment with your video recorder.
- Ensure the network connection is valid and correct.

## Steps

1. Go to **Configuration** → **Camera** → **IP Camera** .
2. Click  .
3. Click **Yes** to confirm.
4. Select the camera upgrade firmware from your storage device.
5. Click **Upgrade** to start upgrading. The camera will restarted automatically after upgrade completed.


## Configure Advanced Camera Parameters

You can configure advanced camera parameters like camera IP address, camera password, etc.

### Before You Start

- Ensure your network camera is on the same network segment with your video recorder.
- Ensure the network connection is valid and correct.

### Steps

1. Go to **Configuration** → **Camera** → **IP Camera** .
2. Click  .
3. Set camera parameters like IP address, camera password, etc.
4. Click **Apply**.

## Advanced Settings

### Steps

1. Go to **Configuration** → **Camera** → **IP Camera** .
2. Click **More**.
3. Configure the parameters as your desire.

#### H.265 Auto Switch Configuration

If you enable the option, the device will automatically switch to H.265 stream for the network camera (which supports H.265 video format) for the initial access.

#### Upgrade

Upgrade the added network cameras.

#### Export/Import

The information of added network camera can be generated into an excel file and exported to the local device for backup, including the IP address, port, password of admin, etc. And the



exported file can be edited on your computer, like adding or deleting the content, and copying the settings to other devices by importing the excel file to it.

### Protocol

To connect the network cameras which are not configured with the standard protocols, you can configure the customized protocols for them. The system provides 16 customized protocols.

### Camera Activation Password Settings

Change the default password for activating and adding network cameras. For network cameras that are already connected, you can choose to change their passwords to this one in the following pop-up window.

### Batch Configuration

The device can automatically synchronize time of the selected network cameras.

### Wireless Camera Access Settings

When the network bandwidth or device resource is not enough, you can disable the sub-stream of wireless cameras to improve the wireless camera access stability.



#### Note

This function is disabled by default. If you disable the sub-stream of wireless cameras, your device has to restart.

---

### Sort Channel

Channel layout windows are ordered by channel number. You can change the camera linked channel number by dragging windows.

---



#### Note

After sorting channels, the device will reconnect to network cameras.

---

## 5.3.2 OSD Settings

Configure OSD (On-Screen Display) settings for the camera, including date format, camera name, etc.

### Steps

1. Go to **Configuration** → **Camera** → **OSD** .
2. Select a camera.

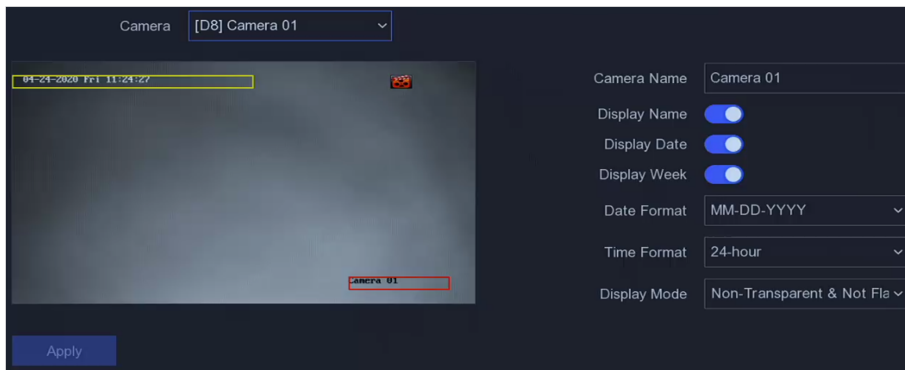


Figure 5-10 OSD

3. Set parameters as your desire.
4. Drag the text frames on the preview window to adjust the OSD position.
5. Click **Apply**.

## 5.3.3 Event

### Motion Detection

Motion detection enables the video recorder to detect the moving objects in the monitored area and trigger alarms.

#### Steps

1. Go to **Configuration → Camera → Event → Motion Detection** .

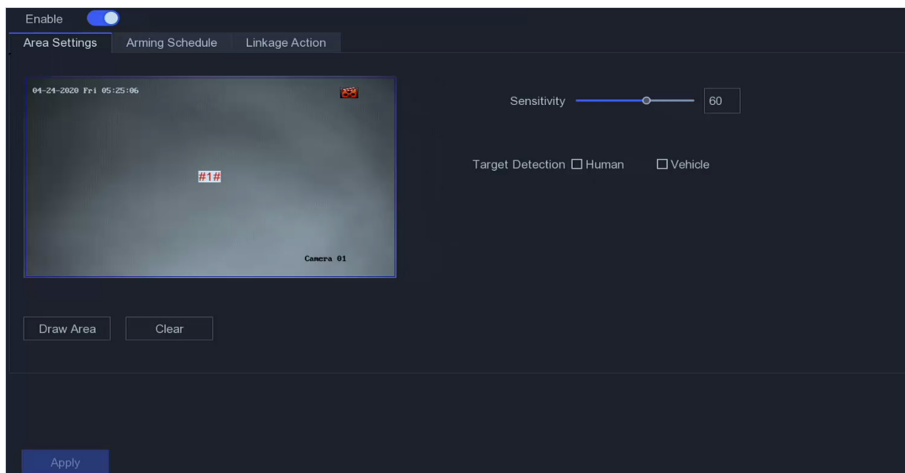


Figure 5-11 Motion Detection

2. Select a camera.
3. Turn on **Enable**.
4. Set the motion detection area.
  - Click **Draw Area** or **Clear** to draw or clear areas. The first area is set as full screen by default.

- Click **Full Screen** to set the motion detection area as full screen. You can drag on the preview window to draw motion detection areas.
- 5. Adjust **Sensitivity**. Sensitivity allows you to calibrate how easily movement could trigger the alarm. A higher value results in the more readily to triggers motion detection.
- 6. **Optional**: Set **Target Detection** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle. Only certain camera models support this function.
- 7. Set the arming schedule. Refer to **Configure Arming Schedule** for details.
- 8. Set the linkage actions. Refer to **Configure Alarm Linkage Action** for details.
- 9. Click **Apply**.

## Line Crossing Detection

Line crossing detection detects people, vehicles, and objects crossing a set virtual line. The detection direction can be set as bidirectional, from left to right or from right to left.

### Steps

1. Go to **Configuration → Camera → Event → Line Crossing**.

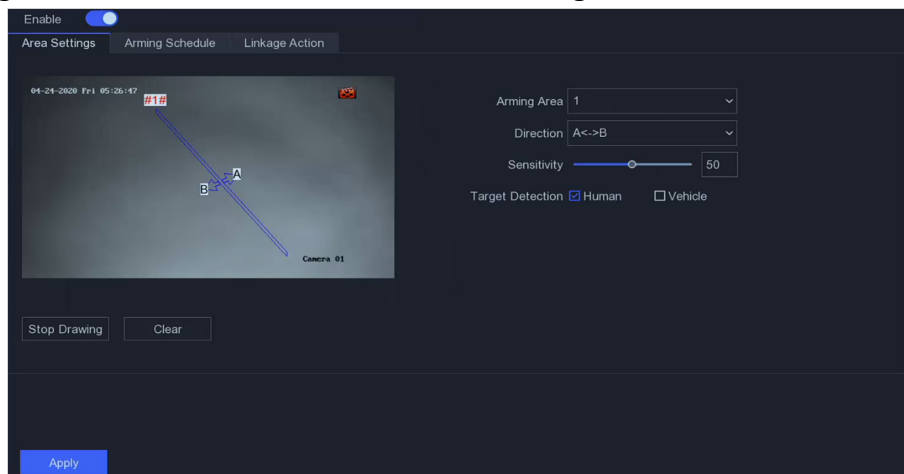


Figure 5-12 Line Crossing Detection

2. Select a camera.
3. Turn on **Enable**.
4. Set line crossing detection rules and detection areas.
  - 1) Set **Arming Area**. Up to 4 arming areas are selectable.
  - 2) Select **Direction** as **A<->B**, **A->B**, or **A<-B**.
    - A<->B**  
Only the arrow on the B side shows. An object crossing a configured line in both directions can be detected and trigger alarms.
    - A->B**  
Only an object crossing the configured line from the A side to the B side can be detected.
    - B->A**

Only an object crossing the configured line from the B side to the A side can be detected.

- 3) Set **Sensitivity**. The higher the value is, the easier the detection alarm will be triggered.
- 4) **Optional**: Set **Target Detection** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle.
- 5) Click **Draw Area**, and set two points in the preview window to draw a virtual line.
5. Set the arming schedule. Refer to for [\*\*Configure Arming Schedule\*\*](#) for details.
6. Set the linkage actions. Refer to [\*\*Configure Alarm Linkage Action\*\*](#) for details.
7. Click **Apply**.

## Intrusion Detection

Intrusion detection detects people, vehicles, or objects that enter and loiter in a pre-defined virtual region.

### Steps

1. Go to **Configuration → Camera → Event → Intrusion** .

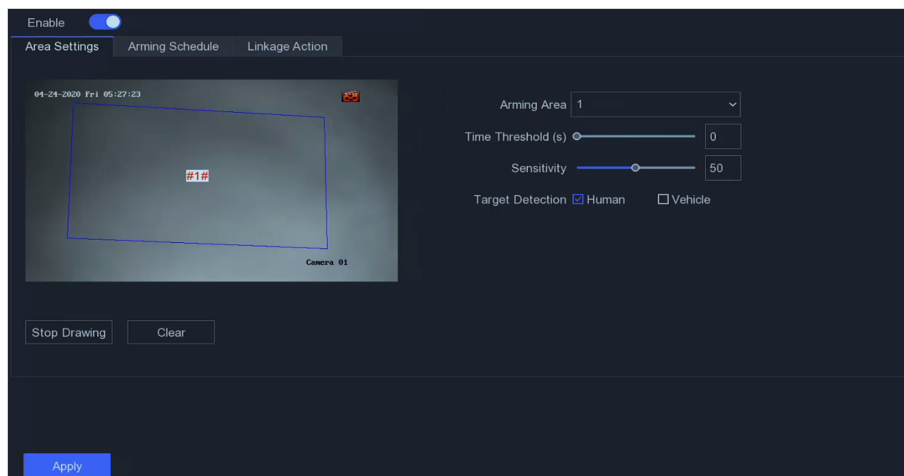


Figure 5-13 Intrusion Detection


2. Select a camera.
3. Turn on **Enable**.
4. Set detection rules and detection areas.
  - 1) Set **Arming Area**. Up to 4 arming areas are selectable.
  - 2) Set **Sensitivity**. The size of the object that can trigger the alarm. The higher the value is, the easier the detection alarm can be triggered. Its range is [1-100].
  - 3) **Optional**: Set **Target Detection** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle.
  - 4) Click **Draw Area** to draw a quadrilateral detection region.
5. Set the arming schedule. Refer to for [\*\*Configure Arming Schedule\*\*](#) for details.
6. Set the linkage actions. Refer to [\*\*Configure Alarm Linkage Action\*\*](#) for details.
7. Click **Apply**.

## Region Entrance Detection

Region entrance detection detects objects that enter a predefined virtual region.

### Steps

1. Go to **Configuration** → **Camera** → **Event** → **Region Entrance** .

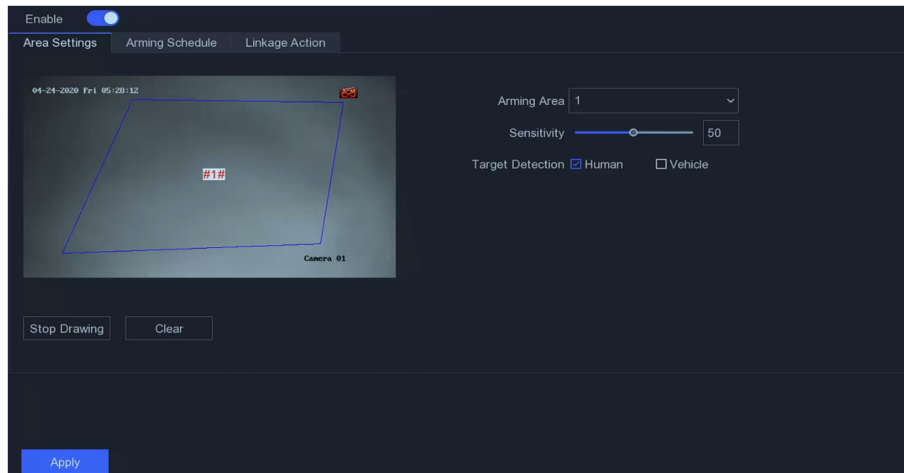

**Figure 5-14 Region Entrance Detection**


2. Select a camera.
3. Turn on **Enable**.
4. Set detection rules and detection areas.
  - 1) Set **Arming Area**. Up to 4 arming areas are selectable.
  - 2) Set **Sensitivity**. The higher the value is, the easier the detection alarm can be triggered. Its range is [1-100].
  - 3) **Optional**: Set **Target Detection** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle.
  - 4) Click **Draw Area** to draw a quadrilateral detection region.
5. Set the arming schedule. Refer to for ***Configure Arming Schedule*** for details.
6. Set the linkage actions. Refer to ***Configure Alarm Linkage Action*** for details.
7. Click **Apply**.

## Region Exiting Detection

Region exiting detection detects objects that exit from a predefined virtual region.

### Steps

1. Go to **Configuration** → **Camera** → **Event** → **Region Exiting** .

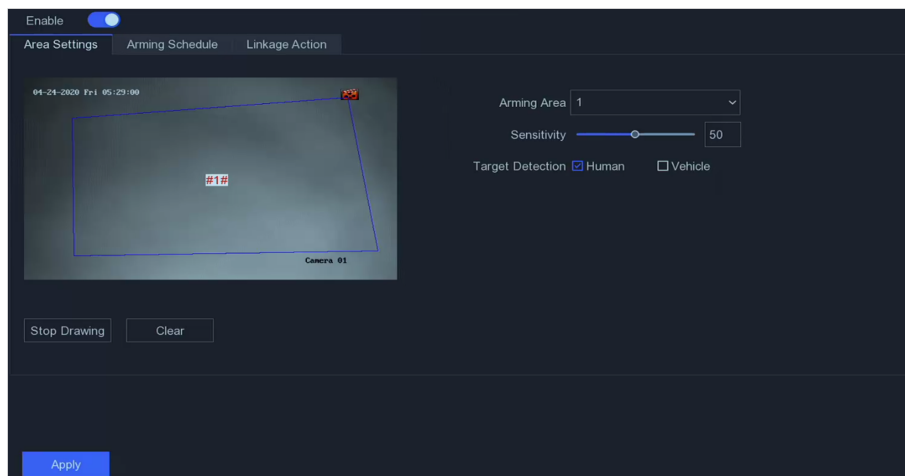

**Figure 5-15 Region Exiting Detection**

2. Select a camera.
3. Turn on **Enable**.
4. Set detection rules and detection areas.
  - 1) Set **Arming Area**. Up to 4 arming areas are selectable.
  - 2) Set **Sensitivity**. The higher the value is, the easier the detection alarm can be triggered. Its range is [1-100].
  - 3) **Optional**: Set **Target Detection** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle.
  - 4) Click **Draw Area** to draw a quadrilateral detection region.
5. Set the arming schedule. Refer to for ***Configure Arming Schedule*** for details.
6. Set the linkage actions. Refer to ***Configure Alarm Linkage Action*** for details.
7. Click **Apply**.

## Configure Arming Schedule

### Steps


1. Select **Arming Schedule**.
2. Choose one day of a week and set the time segment. Up to eight time periods can be set within each day.

---

### **Note**

Time periods shall not be repeated or overlapped.

---

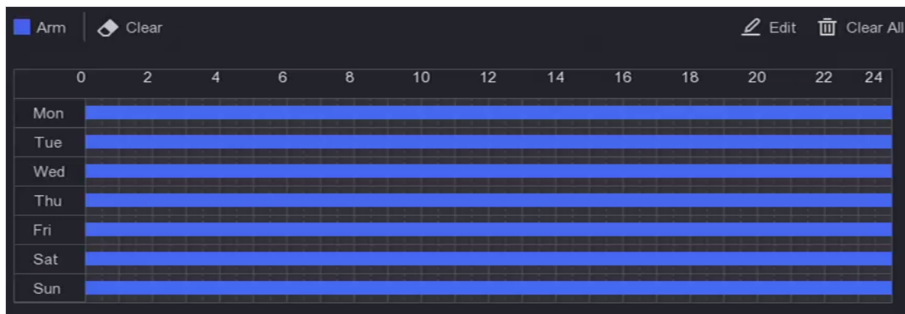

**Figure 5-16 Set Arming Schedule**

3. Click **Apply**.

## Configure Alarm Linkage Action

Alarm linkage actions will be activated when an alarm or exception occurs.

### Steps

1. Click **Linkage Action**.
2. Set normal linkage actions, alarm output linkage actions, trigger channel, etc.

#### Alarm Pop-up Window

The local monitor will pop up the alarming channel image when an alarm is triggered. It requires to select the alarming channel(s) in **Trigger Channel**.

#### Buzzer Alarm

It will trigger a buzzer beep when an alarm is triggered.

#### Notify Surveillance Center

The device will send an exception or alarm signal to the remote client software when an alarm is triggered.

#### Send Email

It will send an email with alarm information when an alarm is triggered.

#### PTZ Linkage

It will trigger PTZ actions (e.g., call preset/patrol/pattern) when smart events occur.

#### Audio and Light Alarm Linkage

For certain network cameras, you can set the alarm linkage action as audio alarm or light alarm.

---

#### **Note**

- Ensure your camera supports audio and light alarm linkage.
  - Ensure the audio output and volume are properly configured.
  - If you require to set audio and light parameters, please log into the network camera via web browser to configure them.
-

3. Click **Apply**.

## 5.4 Recording Management

### 5.4.1 Storage Device

#### Initialize HDD

A newly installed hard disk drive (HDD) must be initialized before it can be used to save videos and information.

##### Before You Start

Install at least an HDD to your video recorder. For detailed steps, refer to Quick Start Guide.

##### Steps

1. Go to **Configuration** → **Record** → **Storage** .
2. Select an HDD.
3. Click **Init**.


##### Repair Database

Repair an HDD that with error in database. Please operate it with the help of professional technical support.


#### Add Network Disk

You can add the allocated NAS or IP SAN disk to the video recorder, and use it as a network HDD.

##### Steps

1. Go to **Configuration** → **Record** → **Storage** .
2. Click **Add**.
3. Select **NetHDD**.
4. Set **Type** as **NAS** or **IP SAN**.
5. Enter **NetHDD IP** address.
6. Click  to search the available disks.



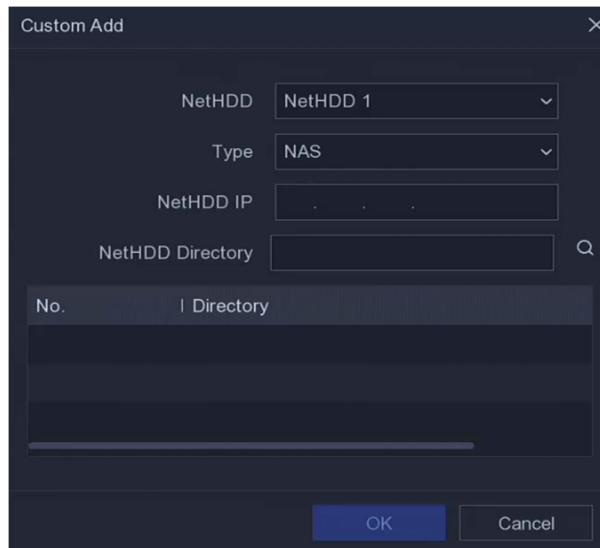

**Figure 5-17 Add NetHDD**

7. Select NAS disk from the list, or manually enter the directory in **NetHDD Directory**.
8. Click **OK**. The added NetHDD will be displayed in the storage device list.

## 5.4.2 Configure Recording Schedule

Video recorder will automatically start/stop recording according to the configured schedule.

### Configure Continuous Recording

#### Steps

1. Go to **Configuration → Record → Parameter** .
2. Set the continuous main stream/sub-stream recording parameters for the camera. Refer to ***Configure Recording Parameter*** for details.
3. Go to **Configuration → Record → Schedule** .
4. Select recording type as **Continuous**. Refer to ***Edit Schedule*** for details.

### Configure Event Recording

You can configure the recording triggered by the motion detection, line crossing detection, and intrusion detection.

#### Steps


1. Go to **Configuration → Event → Smart Event** .
2. Configure the event detection and select the channels to trigger the recording when an event occurs.
3. Go to **Configuration → Record → Parameter** .

4. Set the continuous main stream/sub-stream recording parameters for the camera. Refer to **Configure Recording Parameter** for details.
5. Go to **Configuration → Record → Schedule** .
6. Select recording type as **Event**. Refer to **Edit Schedule** for details.

## Edit Schedule

### Steps

1. Go to **Configuration → Record → Schedule** .

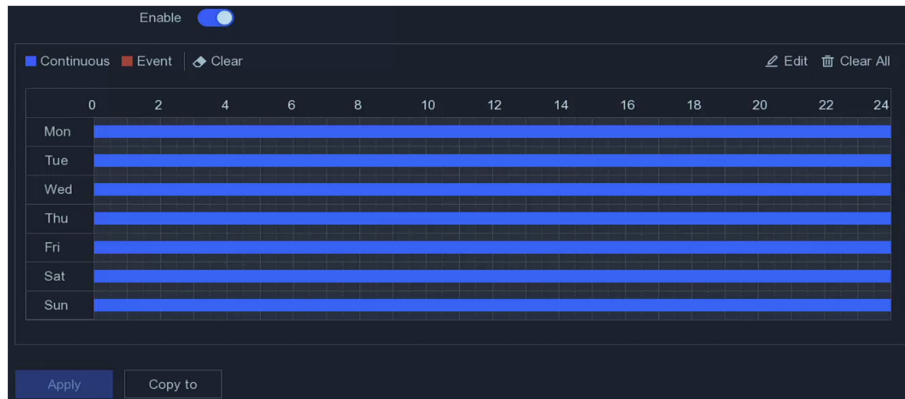

**Figure 5-18 Recording Schedule**

### Continuous

Continuous recording.

### Event

Recording is triggered by events.

2. Select a camera in **Camera No.**
3. Turn on **Enable**.
4. Configure the recording schedule.

#### Edit

- a. Click **Edit**.

#### Schedule

- b. Select a day to configure in **Weekday**.
- c. To set an all-day recording schedule, check **All Day** and select schedule type.
- d. To set other schedules, uncheck **All Day**, and set **Start/End Time** and schedule type.



#### Note

Up to 8 periods can be configured for each day. And the time periods cannot be overlapped with each other.

- e. Click **OK** to save the settings and go back to upper level menu.

#### Draw

#### Schedule

- a. Click to select schedule type as **Continuous** or **Event**.
- b. On the table, drag the mouse on the desired period to draw a colored bar.

5. Click **Apply**.

### 5.4.3 Configure Recording Parameter

#### Steps

1. Go to **Configuration → Record → Parameter** .
2. Configure recording parameters.

#### Main Stream

Main stream refers to the primary stream that affects data recorded to the hard disk drive and will directly determine your video quality and image size. Comparing with the sub-stream, the main stream provides a higher quality video with higher resolution and frame rate.

#### Sub-Stream

Sub-stream is a second codec that runs alongside the mainstream. It allows you to reduce the outgoing internet bandwidth without sacrificing your direct recording quality. Sub-stream is often exclusively used by smartphone applications to view live video. Users with limited internet speeds may benefit most from this setting.

#### Frame Rate

Frame rate refers to how many frames are captured each second. A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout.

#### Resolution

Image resolution is a measure of how much detail a digital image can hold: the greater the resolution, the greater the level of detail. Resolution can be specified as the number of pixel-columns (width) by the number of pixel-rows (height), e.g.,1024×768.

#### Bitrate

The bit rate (in Kbit/s or Mbit/s) is often referred to as speed, but actually defines the number of bits/time unit and not distance/time unit.



#### Note

Higher resolution, frame rate, and bitrate provide you better video quality, but it also requires more internet bandwidth and uses more storage space on the hard disk drive.


3. Click **Apply**.

### 5.5 Wi-Fi

The device can work as a wireless network router.

#### Steps

1. Go to **Configuration → Wi-Fi** .

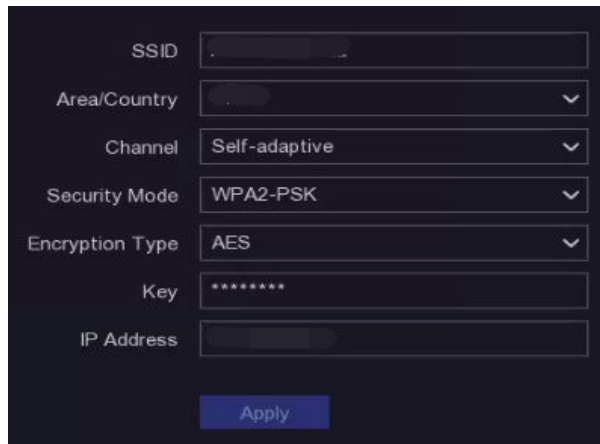

**Figure 5-19 Wi-Fi Settings**

2. Configure following wireless network parameters.

**SSID**

It is the short for Service Set Identifier. SSID is the Wi-Fi name provided by the device.

**Area/Country**

Select where the router is used.

**Channel**

Select the best channel according to your situation.

**Bandwidth**

Select the bandwidth mode.

**Security Mode**

Select the security protocol for the wireless network.

**Encryption Type**

It is used to protect information.

**Key**

Enter the encryption key.

**IP Address**

Enter the Wi-Fi IP address.

3. Click **Apply** to save the settings.

## Chapter 6 Configuration (Expert Mode)

Go to **Configuration** , and click **Expert Mode** at the lower-left corner.

### 6.1 System Configuration

#### 6.1.1 General

##### Configure Basic Settings

You can configure the language, system time, output resolution, mouse pointer speed, lock screen password, etc.

Go to **Configuration** → **System** → **General** → **Basic Settings** , configure the parameters as your desire, and click **Apply**.

##### Language

The default language is **English**.

##### VGA/HDMI Resolution

Select the output resolution, which must be the same with the resolution of the VGA/HDMI display.

##### Lock Screen Password


You need to enter password for authentication if the screen is locked.

##### Mouse Pointer Speed

Set the speed of mouse pointer; 4 levels are configurable.

##### Wizard

The wizard will pop up after the device starts up.

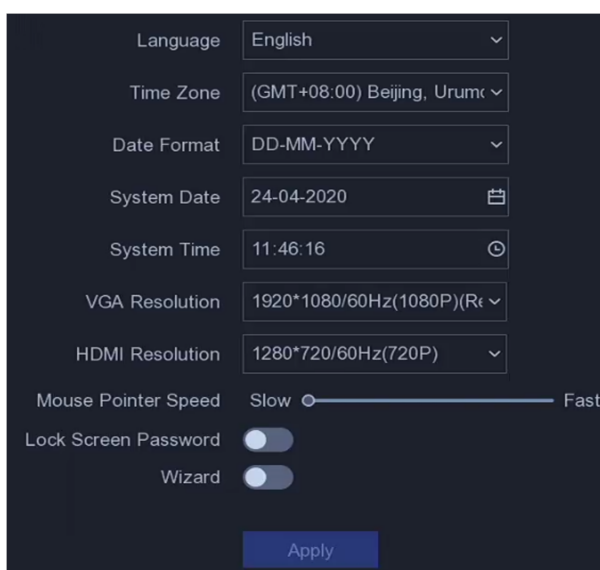

**Figure 6-1 Basic Settings**

## Configure DST Settings

DST (Daylight Saving Time) refers to the period of the year when clocks are moved one period ahead. In some areas worldwide, this has the effect of creating more sunlit hours in the evening during months when the weather is the warmest.

Go to **Configuration → System → General → DST Settings**, configure the parameters as your desire, and click **Apply**.

## Configure More Settings

You can configure your device name, lock screen time, output mode, etc.

Go to **Configuration → System → General → More Settings**, configure the parameters as your desire, and click **Apply**.

### Device Name

Edit the video recorder name.

### Device No.


The number is required in the connection with remote control, network keyboard, etc. Edit the serial number of video recorder. The device number ranges from 1 to 255, and the default value is 255.

### Lock Screen

Set timeout time for lock screen.

### Menu Output Mode

Choose output to display local menu.

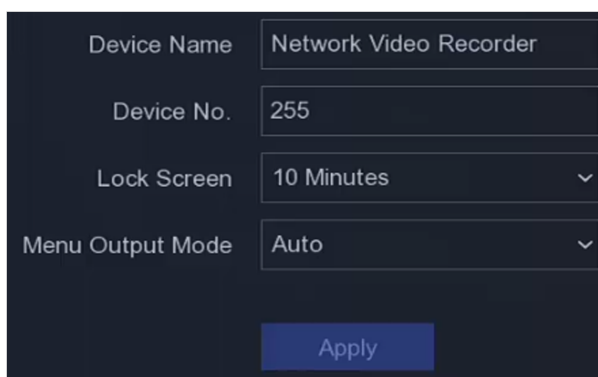

**Figure 6-2 More Settings**


## 6.1.2 Live View

### Configure General Parameters

You can configure the output interface, mute or turning on the audio, event output interface, etc.

#### Steps

1. Go to **Configuration → System → Live View → General**.

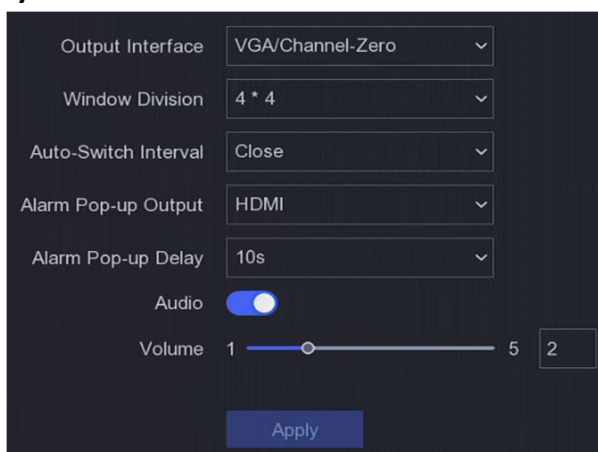

**Figure 6-3 Live View-General**

2. Configure the Live View parameters.

#### Window Division

Select the live view window division.

#### Auto Switch Interval

The time to dwell in a camera before switching to next camera when auto-switch in live view is enabled.

### Alarm Pop-up Output

Select the output to show alarm video.

### Alarm Pop-up Delay

Set the time to show alarm event image.

### Audio

Turn on/off audio output for the selected video output.



### Volume

Adjust the live view, playback, and two-way audio volume for the selected video output interface.

3. Click **Apply**.

## Configure Live View Layout

### Steps

1. Go to **Configuration** → **System** → **Live View** → **View** .
2. Set **Output Interface**.
3. Select a window, and double click a camera the list you would like to display. + means no camera is displayed on the window.
4. **Optional:** Click  or  to start or stop live view of all cameras.
5. Click **Apply**.


## Configure Channel-Zero Encoding

Enable the channel-zero encoding when you need to get a remote view of many channels in real time from a web browser or CMS (Client Management System) software, in order to decrease the bandwidth requirement without affecting the image quality.

### Steps

1. Go to **Configuration** → **System** → **Live View** → **General** .
2. Set **Video Output Interface** as **Channel-Zero**.
3. Go to **Configuration** → **System** → **Live View** → **Channel-Zero** .



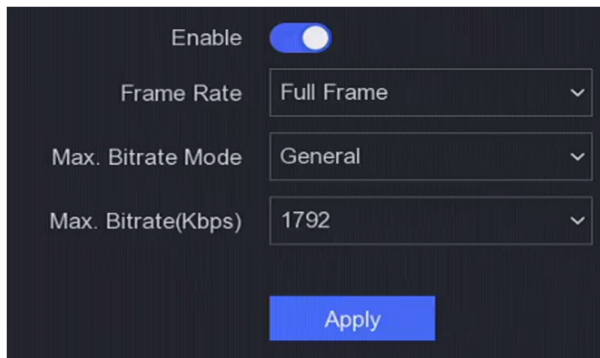

**Figure 6-4 Channel-Zero**

4. Turn on **Enable**.
5. Configure **Frame Rate**, **Max. Bitrate Mode**, and **Max. Bitrate**. The higher frame rate and bitrate require higher bandwidth requirement.
6. Click **Apply**.

### 6.1.3 User

Refer to [User](#) for details.

### 6.1.4 Display

The LCD screen brightness and screen off time can be configured.

#### Steps

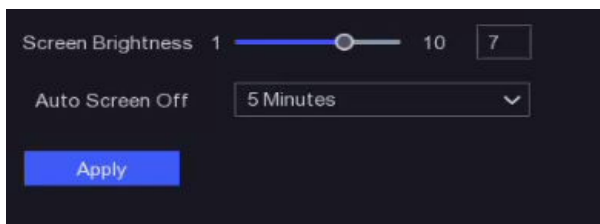


#### Note

This function is only available for the devices with LCD display.

---

1. Go to **Configuration → System → Display** .  
Display Settings



2. Configure **Screen Brightness** and **Auto Screen Off** as your desire.

#### Screen Brightness

The LCD screen brightness.

#### Auto Screen Off

The LCD screen will automatically turn off after the device is idle for a specified time. You can press the power button at the device side panel or move your mouse to light up the screen.

---

### Note

If you press the power button for more than 5 seconds, your device will be shut down.

---

3. Click **Apply**.

## 6.2 Network Configuration

### 6.2.1 TCP/IP

TCP/IP must be properly configured before you operate video recorder over network.

#### Steps

1. Go to **Configuration → Network → General → TCP/IP**.
2. Configure network parameters.

#### Working Mode

- **Multi-address Mode:** The parameters of the two NIC cards can be configured independently. You can select LAN1 or LAN2 in the NIC type field for parameter settings. You can select one NIC card as default route. And then the system is connecting with the extranet and the data will be forwarded through the default route.
- **Net-fault Tolerance Mode:** The two NIC cards use the same IP address, and you can select the Main NIC to LAN1 or LAN2. By this way, in case of one NIC card failure, the video recorder will automatically enable the other standby NIC card so as to ensure the normal running of the whole system.
- **Load Balance Mode:** By using the same IP address and two NIC cards share the load of the total bandwidth, which enables the system to provide two Gigabit network capacity

---

### Note

Working mode is only available for certain models.

---

#### NIC Type

Select NIC type as your desire.

#### DHCP

If the DHCP server is available, you can check **Enable DHCP** to automatically obtain an IP address and other network settings from that server.

#### MTU

The maximum transmission unit (MTU) is the size of the largest network layer protocol data unit that can be communicated in a single network transaction.

#### Obtain DNS Automatically

If **DHCP** is checked. You can check **Obtain DNS Automatically** to obtain **Preferred DNS Server** and **Alternate DNS Server**.

3. Click **Apply**.

### 6.2.2 DDNS

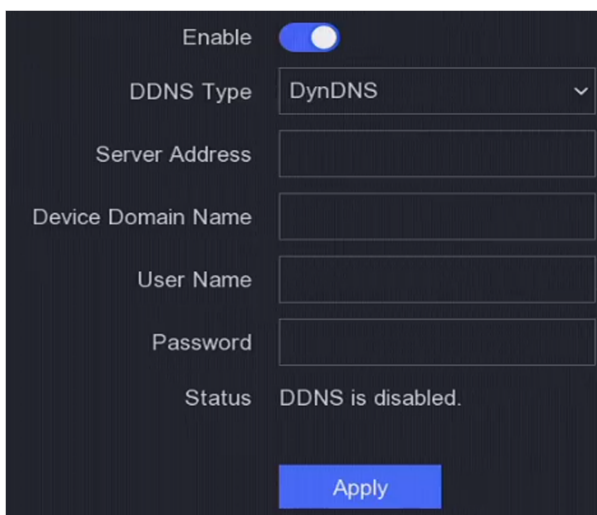
Dynamic domain name server (DDNS) maps dynamic user IP addresses to a fixed domain name server.

#### Before You Start

Register DynDNS, PeanutHull and NO-IP services with your ISP.

#### Steps

1. Go to **Configuration** → **Network** → **General** → **DDNS** .



The screenshot shows a dark-themed configuration window for DDNS. At the top, there is an 'Enable' toggle switch that is turned on. Below it, the 'DDNS Type' is set to 'DynDNS' in a dropdown menu. There are four text input fields: 'Server Address', 'Device Domain Name', 'User Name', and 'Password'. At the bottom, the 'Status' is displayed as 'DDNS is disabled.' and there is a blue 'Apply' button.

Figure 6-5 DDNS

2. Turn on **Enable**.

3. Select a DDNS type.

4. Enter parameters including service address, domain name, etc.

5. Click **Apply**.

#### What to do next

You can view DDNS status in **Status**.

### 6.2.3 NAT

Two ways are provided for port mapping to realize the remote access via the cross-segment network, UPnP™ and manual mapping.

## Before You Start

Enable the UPnP™ function of your router if UPnP™ is required. When the device network working mode is multi-address, the default device route should be on the same network segment as the LAN IP address of the router.

## Steps

1. Go to **Configuration → Network → General → NAT**.

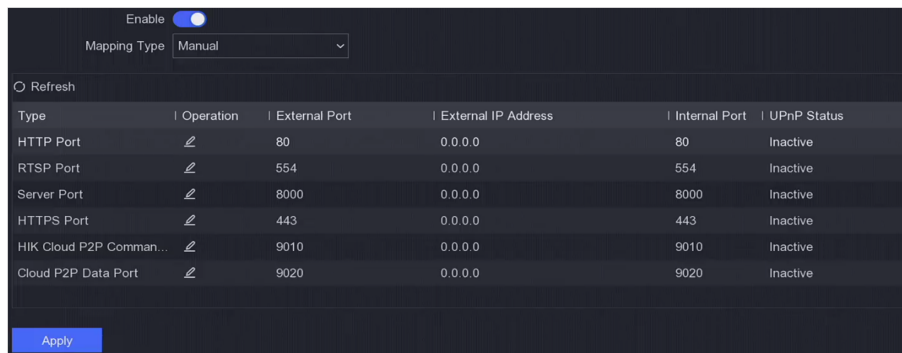


Figure 6-6 NAT

2. Turn on **Enable**.

3. Select **Mapping Type** as **Manual** or **Auto**

**Auto** The port mapping items are read-only, and the external ports are set by the router automatically. You can click **Refresh** to get the latest status of the port mapping.

**Manual** Select an external port type. Click to edit **External Port**. You can use the default external port No., or change it according to actual requirements. **External Port** indicates the port No. for port mapping in the router.

The value of the RTSP port No. should be 554 or between 1024 and 65535, while the value of the other ports should be between 1 and 65535 and the value must be different from each other. If multiple devices are configured for the UPnP™ settings under the same router, the value of the port No. for each device should be unique.

4. Set the virtual server of your router, including internal source port, external source port, etc. The virtual server parameters shall be corresponding with your device port.

## 6.2.4 NTP

Your device can connect to a network time protocol (NTP) server to ensure that the system time is accurate.

## Steps

1. Go to **Configuration → Network → General → NTP**.

2. Turn on **Enable**.

3. Enter the parameters.

**Interval**

Time interval between two time synchronization with NTP server.

### **NTP Server**

IP address of the NTP server.

4. Click **Apply**.

## **6.2.5 Ports (More Settings)**

Set different port types to enable relevant functions as your desire.

Go to **Configuration → Network → General → More Settings** .

### **Alarm Host IP/Port**

The device will send the alarm event or exception message to the alarm host when an alarm is triggered. The remote alarm host must have the client management system (CMS) software installed.

**Alarm Host IP** refers to the IP address of the remote PC on which the CMS software (e.g., iVMS-4200) is installed, and the Alarm Host Port (7200 by default) must be the same as the alarm monitoring port configured in the software.

### **Server Port**

For remote client software access. Ranges from 2000 to 65535. The default value is 8000.

### **HTTP Port**

For remote web browser access. The default value is 80.

### **Multicast IP**

Multicast can be configured to enable live view for cameras that exceed the maximum number allowed through network. A multicast IP address covers Class-D IP ranging from 224.0.0.0 to 239.255.255.255 and it is recommended to use the IP address ranging from 239.252.0.0 to 239.255.255.255.

When adding a device to the CMS software, the multicast address must be the same as that of the device.

### **RTSP Port**

RTSP (Real Time Streaming Protocol) is a network control protocol designed for use in entertainment and communications systems to control streaming media servers. The port is 554 by default.

### **Output Bandwidth Limit**

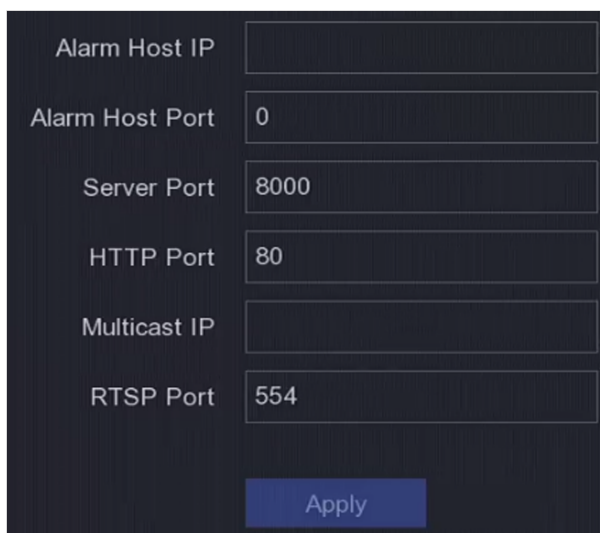
You can check the checkbox to enable output bandwidth limit.

### **Output Bandwidth**

After enable the output bandwidth limit, input the output bandwidth.

## Note

- The output bandwidth limit is used for the remote live view and playback.
  - The default output bandwidth is the maximum limit.
- 



Alarm Host IP	<input type="text"/>
Alarm Host Port	<input type="text" value="0"/>
Server Port	<input type="text" value="8000"/>
HTTP Port	<input type="text" value="80"/>
Multicast IP	<input type="text"/>
RTSP Port	<input type="text" value="554"/>


**Figure 6-7 Port Settings**

## 6.2.6 ISUP

SDK is based on Intelligent Security Uplink Protocol (ISUP). It provides APIs, library files, and commands for the third-party platform to access devices such as NVRs, speed domes, DVRs, network cameras, mobile NVRs, mobile devices, decoding devices, etc. With this protocol, the third-party platform can realize functions like live view, playback, two-way audio, PTZ control, etc.

### Steps

1. Go to **Configuration** → **Network** → **Platform Access** .
2. Set **Type** as **ISUP**.

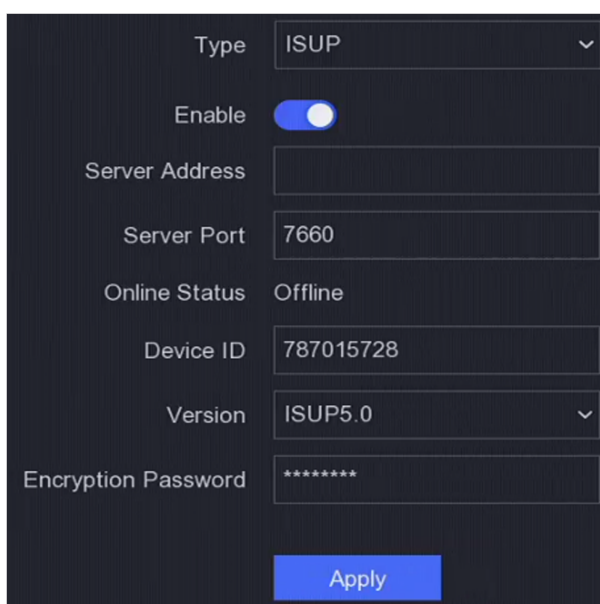

**Figure 6-8 ISUP**

**3. Turn on **Enable**.**



**Note**

Enabling ISUP will disable other platform access.

**4. Set the related parameters.**

**Server Address**

The platform server IP address.

**Server Port**

The platform server port, ranges from 1024 to 65535. The actual port shall be provided by the platform.

**Device ID**

The Device ID shall be provided by the platform.

**Version**

ISUP protocol version, only V5.0 is available.

**Encryption Password**

Encryption password is required when using ISUP V5.0 version, it provides more secure communication between the device and platform. Enter it for verification after the device is registered to the ISUP platform.

**5. Click **Apply** to save the settings and restart the device.**

**What to do next**

You can see the online status (online or offline) after the device is restarted.

### 6.2.7 Hik-Connect

Go to **Configuration** → **Network** → **Platform Access** . Refer to [\*\*\*Hik-Connect\*\*\*](#) for details.

### 6.2.8 Email

Go to **Configuration** → **Network** → **Email** . Refer to [\*\*\*Email\*\*\*](#) for details.

## 6.3 Camera Management

### 6.3.1 Network Camera

#### Add Network Camera Through Wi-Fi

##### Add Wi-Fi Camera

You can use Wi-Fi match function to search Wi-Fi cameras that are not activated, and add them to the device automatically. Select **Wi-Fi Match** from the right-click menu in live view mode, and the device will search and add Wi-Fi cameras. The process will take about 2 minutes. The Wi-Fi camera will use **IP Camera Activation Password** as its password. (Refer to [\*\*\*Activate Your Device\*\*\*](#) )



##### Note

- It is recommended to keep the distance between Wi-Fi camera and device within 50 meters.
  - Only certain Wi-Fi camera models and versions support this function.
  - Ensure the Wi-Fi camera is powered on, not activated, and has not been connected with other devices via network cable.
  - In a kit, Wi-Fi camera will connect to the NVR automatically.
- 

#### Configure Camera as Repeater

The connected Wi-Fi cameras can be set as repeaters to extend the wireless network connection distance.

##### Before You Start

- Ensure your Wi-Fi cameras support this function.
- Before installing Wi-Fi cameras, you have to configure the repeater function first.



## Steps

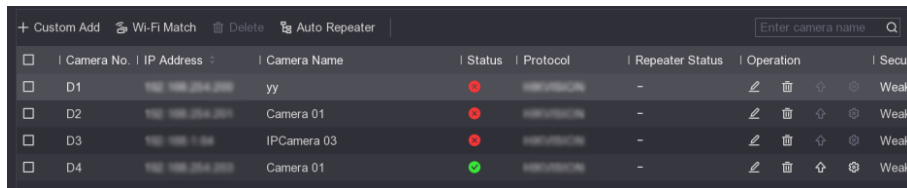
---

### Note

Only certain video recorder models support this function.

---

1. Add Wi-Fi cameras to the device through wireless network. Refer to ***Add Wi-Fi Camera*** for details.
2. Go to **Configuration → Camera → Camera** .



Camera No.	IP Address	Camera Name	Status	Protocol	Repeater Status	Operation	Security
D1	192.168.254.200	yy	Red	HTTP	-	⏏ ⏏ ⏏ ⏏	Weak
D2	192.168.254.201	Camera 01	Red	HTTP	-	⏏ ⏏ ⏏ ⏏	Weak
D3	192.168.1.10	IPCamera 03	Red	HTTP	-	⏏ ⏏ ⏏ ⏏	Weak
D4	192.168.254.200	Camera 01	Green	HTTP	-	⏏ ⏏ ⏏ ⏏	Weak

**Figure 6-9 Configure Camera as Repeater**

3. Turn on the switch(s) in **Auto Repeater** of Wi-Fi camera(s) as your desire.
- 

### Note

- The repeater camera and repeated camera shall both enable this function.
- Only two layers are allowed for the topology.

4. **Optional:** Click **Enable Repeater** or **Disable Repeater** to enable or disable the repeater function of all cameras.
- 

## View Camera Topology

According to Wi-Fi signal strength, Wi-Fi cameras will automatically form a logical network topology, you can view the connection topology and status in **Configuration → Camera → Camera Topology** .

---

### Note

This function is only available for certain models.

---

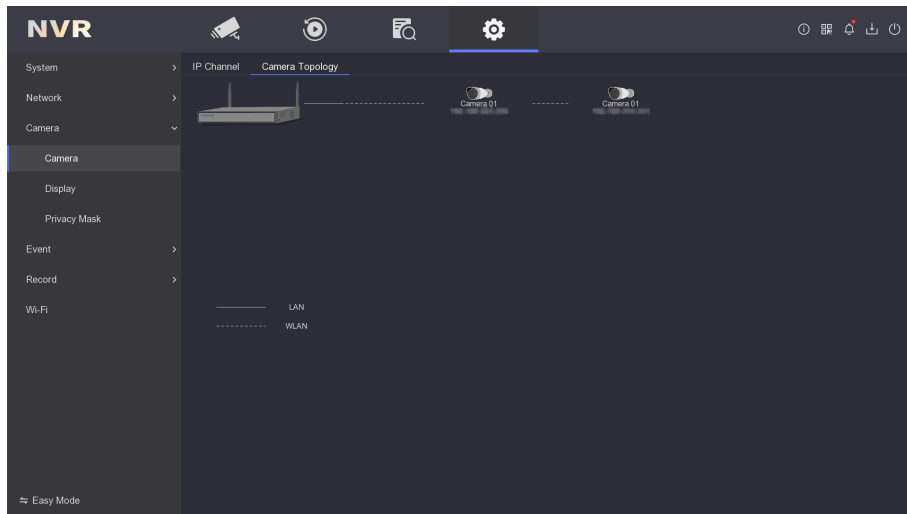


Figure 6-10 Camera Topology

## Add Automatically Searched Online Network Camera

Add the network cameras to your video recorder.

### Before You Start

- Ensure your network camera is on the same network segment with your video recorder.
- Ensure the network connection is valid and correct.
- Ensure the network camera password is the same as your video recorder.

### Steps

1. Go to **Configuration** → **Camera** → **Camera** .

2. Click **Online Device List**. The online cameras on the same network segment will be displayed in the list.

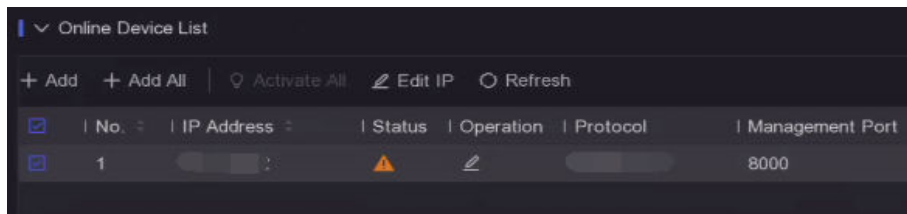


Figure 6-11 Online Device

3. **Optional:** Click **Edit IP** to edit camera IP addresses in batch. The system will allocate IP addresses to the selected cameras in order.

### Note

Ensure the selected cameras are activated.

4. Select a network camera, and click **Add** to add it.

## Add Network Camera Manually

Add the network cameras to your video recorder.

### Before You Start

- Ensure your network camera is on the same network segment with that of your video recorder.
- Ensure the network connection is valid and correct.
- Ensure the network camera is activated.

### Steps

1. Go to **Configuration** → **Camera** → **Camera** .
2. Click **+** .

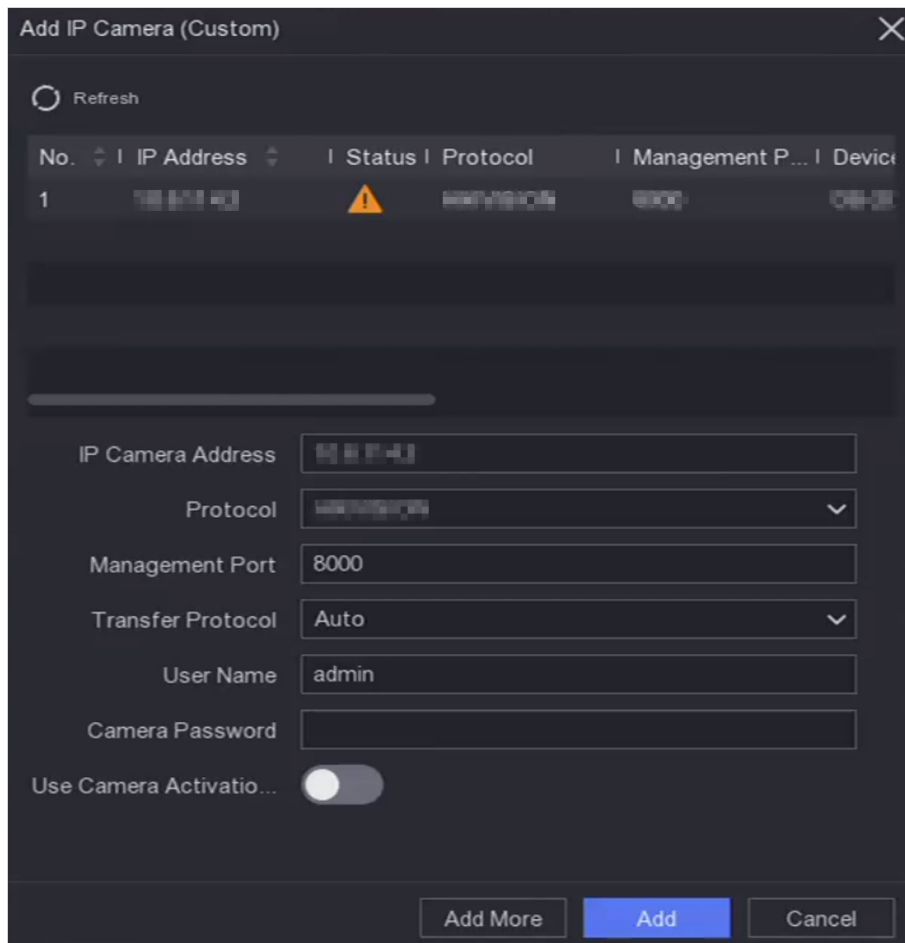


Figure 6-12 Add IP Camera

3. Enter network camera parameters.

### Use Camera Activation Password


If it is enabled, the video recorder will add the camera by the set channel default password.

4. Click **Add**.

### Edit Network Camera

You can edit the IP address, protocol and other parameters of network cameras.

#### Steps

1. Go to **Configuration → Camera → Camera** .
2. Click  of an added network camera.

#### Channel Port

If the connected device is an encoding device with multiple channels, you can choose the channel to connect by selecting the channel port No. in the drop-down list.

3. **Optional:** Click **Edit IP** to edit camera IP addresses in batch. The system will allocate IP addresses to the selected cameras in order.
4. Click **OK**.


### Upgrade Network Camera

The Network camera can be remotely upgraded through the device.

#### Before You Start

- Ensure you have inserted the USB flash drive to the device, and it contains the network camera upgrade firmware.
- Ensure your network camera is on the same network segment with your video recorder.
- Ensure the network connection is valid and correct.

#### Steps

1. Go to **Configuration → Camera → Camera** .
2. Click  .
3. Click **Yes** to confirm.
4. Select the camera upgrade firmware from your storage device.
5. Click **Upgrade** to start upgrading. The camera will restarted automatically after upgrade completed.


### Configure Advanced Camera Parameters

You can configure advanced camera parameters like camera IP address, camera password, etc.

#### Before You Start

- Ensure your network camera is on the same network segment with your video recorder.
- Ensure the network connection is valid and correct.

#### Steps

1. Go to **Configuration → Camera → Camera** .
2. Click  .
3. Set camera parameters like IP address, camera password, etc.

4. Click **Apply**.

## Advanced Settings

### Steps

1. Go to **Configuration → Camera → Camera** .
2. Click **More**.
3. Configure the parameters as your desire.

#### H.265 Auto Switch Configuration

If you enable the option, the device will automatically switch to H.265 stream for the network camera (which supports H.265 video format) for the initial access.

#### Upgrade

Upgrade the added network cameras.

#### Export/Import

The information of added network camera can be generated into an excel file and exported to the local device for backup, including the IP address, port, password of admin, etc. And the exported file can be edited on your computer, like adding or deleting the content, and copying the settings to other devices by importing the excel file to it.

#### Protocol

To connect the network cameras which are not configured with the standard protocols, you can configure the customized protocols for them. The system provides 16 customized protocols.

#### Camera Activation Password Settings

Change the default password for activating and adding network cameras. For network cameras that are already connected, you can choose to change their passwords to this one in the following pup-up window.

#### Batch Configuration

The device can automatically synchronize time of the selected network cameras.

#### Wireless Camera Access Settings

When the network bandwidth or device resource is not enough, you can disable the sub-stream of wireless cameras to improve the wireless camera access stability.



#### Note

This function is disabled by default. If you disable the sub-stream of wireless cameras, your device has to restart.

---

#### Sort Channel

Channel layout windows are ordered by channel number. You can change the camera linked channel number by dragging windows.



After sorting channels, the device will reconnect to network cameras.

---

### 6.3.2 Display Settings

Configure the OSD (On-Screen Display), image settings, exposure settings, day/night switch settings, etc.

#### Steps

1. Go to **Configuration** → **Camera** → **Display** .
2. Set **Camera**.
3. Configure parameters as your desire.

#### OSD Settings

Configure the OSD (On-screen Display) settings for the camera, including date/time, camera name, etc.

#### Image Settings

Customize the image parameters including the brightness, contrast, and saturation for the live view and recording effect.

#### Exposure

Set the camera exposure time (1/10000 to 1 sec). A larger exposure value results in a brighter image.

#### Day/Night Switch


The camera can be set to day, night, or auto switch mode according to the surrounding illumination conditions.

#### Backlight

Set the camera's wide dynamic range (0 to 100). When the surrounding illumination and the object have large differences in brightness, you should set the WDR value.

#### Image Enhancement

For optimized image contrast enhancement.

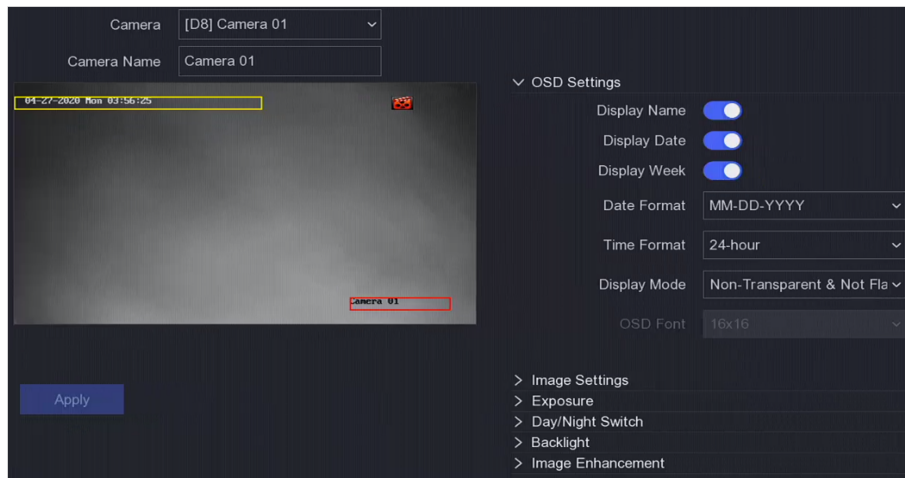

**Figure 6-13 OSD**


4. Drag the text frames on the preview window to adjust the OSD position.
5. Click **Apply**.

### 6.3.3 Privacy Mask

You are allowed to configure the privacy mask areas that cannot be viewed or recorded.

#### Steps

1. Go to **Configuration** → **Camera** → **Privacy Mask** .
2. Select **Camera**.
3. Turn on **Enable**.

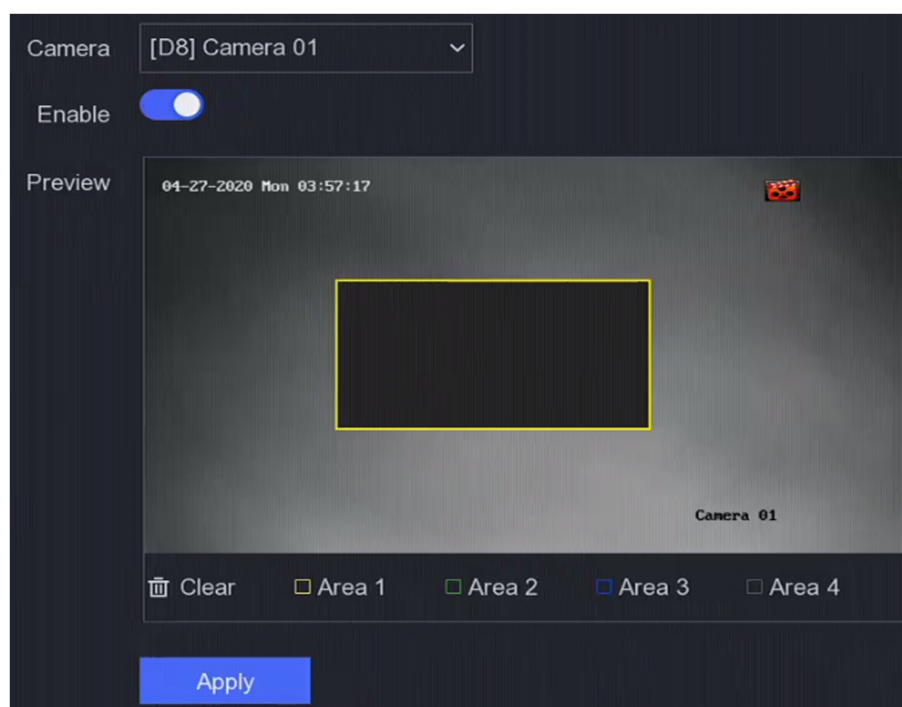

**Figure 6-14 Privacy Mask**

4. Drag to draw an area on the window. The frames of the areas will be marked with different colors.

---

**Note**

Up to 4 privacy mask areas can be configured. The size of each area can be adjusted.

5. Click **Apply**.

## 6.4 Event Configuration

### 6.4.1 Normal Event

#### Motion Detection

Motion detection enables the video recorder to detect the moving objects in the monitored area and trigger alarms. Refer to [Motion Detection](#) for details.

#### Video Tampering

Trigger alarm when the lens is covered and take alarm response actions.



## Steps

1. Go to **Configuration → Event → Normal Event → Video Tampering** .

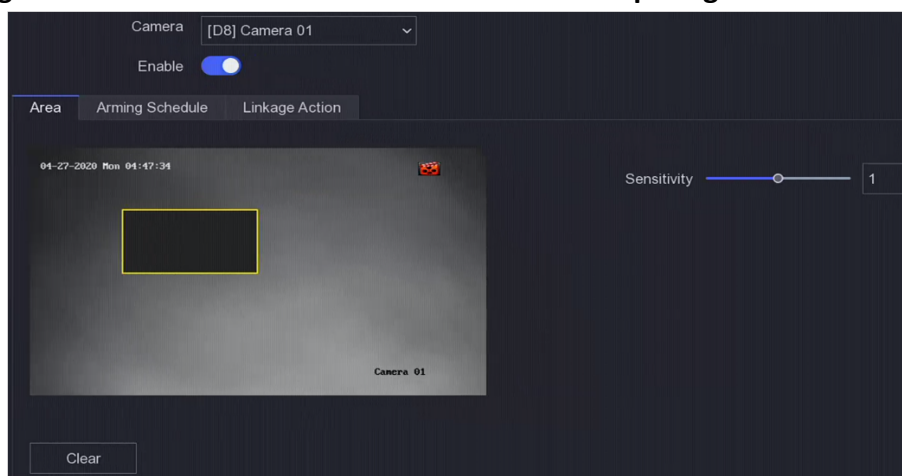


Figure 6-15 Video Tampering

2. Set **Camera**.
3. Turn on **Enable**.
4. Adjust **Sensitivity** as your desire. The higher the value is, the more easily the video tampering can be triggered.
5. Set the arming schedule. Refer to [Configure Arming Schedule](#) for details.
6. Set the linkage actions. Refer to [Configure Alarm Linkage Action](#) for details.
7. Click **Apply**.

## Video Loss

Detect video loss of a camera and take alarm response actions.

### Steps

1. Go to **Configuration → Event → Normal Event → Video Loss** .
2. Set **Camera**.
3. Turn on **Enable**.
4. Set the arming schedule. Refer to [Configure Arming Schedule](#) for details.
5. Set the linkage actions. Refer to [Configure Alarm Linkage Action](#) for details.
6. Click **Apply**.

## Alarm Input

Set linkage actions for an external sensor alarm.

### Steps

1. Go to **Configuration → Event → Normal Event → Alarm Input** .

Alarm Input No.	Alarm Name	Alarm Type	Enable	Operation
Local<-1		N.O	No	
Local<-2		N.O	No	
Local<-3		N.O	No	
Local<-4		N.O	No	

**Figure 6-16 Alarm Input**

**Note**

Local alarm input: Local alarm input is triggered by the external device that connected to the video recorder's terminal block.

- Click of a desired alarm input.

**Figure 6-17 Edit Alarm Input**

- Customize **Alarm Name**.
- Set alarm type as **N.O** (normally open) or **N.C** (normally closed).
- Set **Settings** as **Input** to enable the function.

**Note**

If you set **Settings** as **Nonuse**, the alarm input will be disabled. If you set **Settings** as **One-Key Disarming**, the selected linkage method(s) of the alarm input will be disabled.

- Set the arming schedule. Refer to **Configure Arming Schedule** for details.
- Set the linkage actions. Refer to **Configure Alarm Linkage Action** for details.
- Click **Apply**.

## Alarm Output

Trigger an alarm output when an alarm is triggered.

**Steps**

- Go to **Configuration → Event → Normal Event → Alarm Output** .

Alarm Output No.	Alarm Name	Dwell Time	Operation
Local->1		5s	

**Figure 6-18 Alarm Output**

- Click of a desired alarm output.
- Customize **Alarm Name**.
- Select **Dwell Time**.





**Figure 6-19 Edit Alarm Output**


5. Set **Settings** as **Input** to enable the function.
6. Set the arming schedule. Refer to ***Configure Arming Schedule*** for details.
7. Click **Apply**.

## Exception

Exception events can be configured to take the event hint in the live view window and trigger alarm outputs and linkage actions.

### Steps

1. Go to **Configuration → Event → Normal Event → Exception**.
2. Configure event hint. When the set events occur, you will receive hints in alarm center.
  - 1) Enable **Event Hint**.
  - 2) Select events to hint. Choose from:
    - Click  of **Event Hint Configuration** to select events.
    - Click  in the upper-right corner of local menu to enter alarm center to select events.
3. Select **Exception Type** to set its linkage actions.

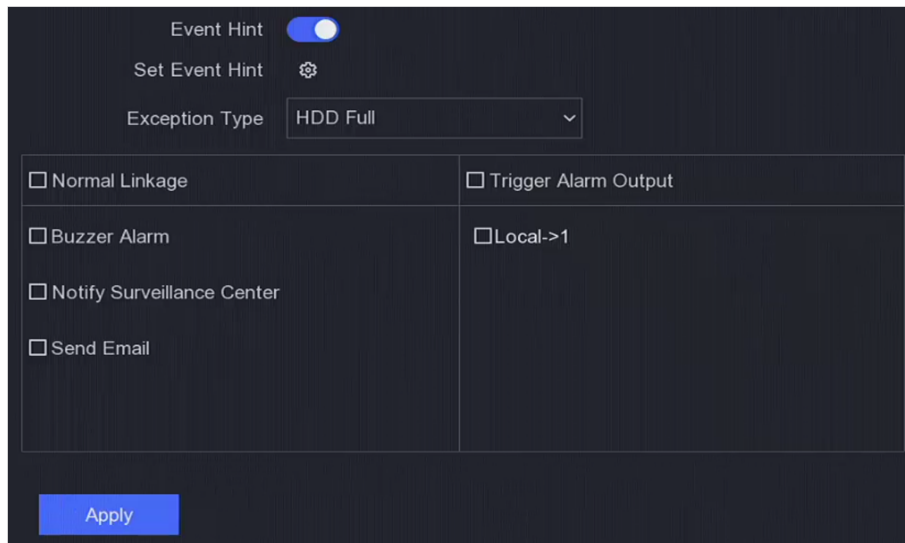

**Figure 6-20 Exceptions**

4. Set the arming schedule. Refer to ***Configure Arming Schedule*** for details.
5. Click **Apply**.

## 6.4.2 Smart Event

### Line Crossing Detection

Line crossing detection detects people, vehicles, and objects crossing a set virtual line. The detection direction can be set as bidirectional, from left to right or from right to left.

#### Steps

1. Go to **Configuration → Event → Smart Event → Line Crossing** .

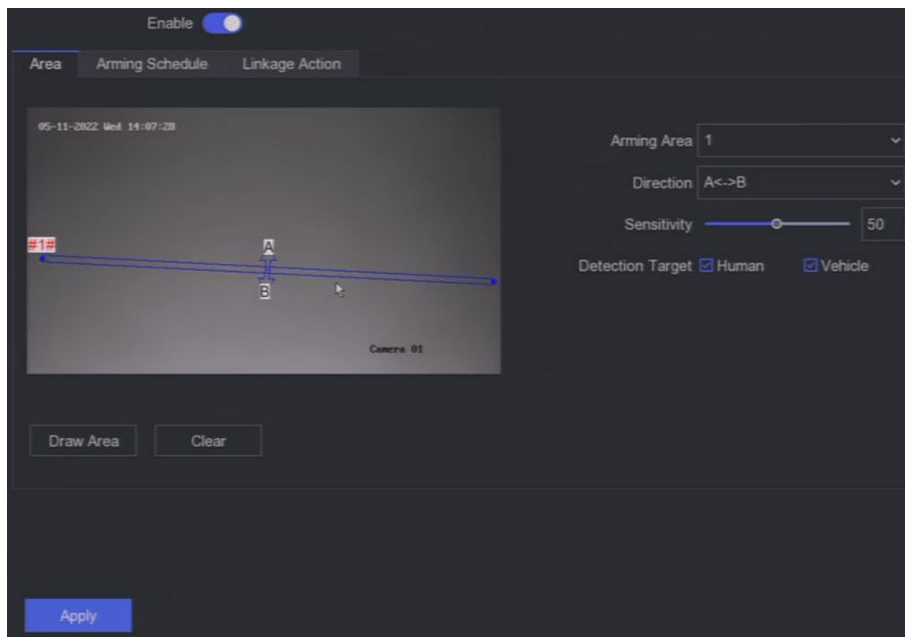


Figure 6-21 Line Crossing Detection

2. Set **Camera**.
3. Turn on **Enable**.
4. **Optional**: Check **Save VCA Picture** to save the captured pictures of VCA detection.
5. Set the detection rules and detection areas.
  - 1) Set **Arming Area**. Up to 4 arming areas are selectable.
  - 2) Set **Direction** as **A<->B**, **A->B**, or **A<-B**.
    - A<->B**

Only the arrow on the B side shows. An object crossing a configured line in both directions can be detected and trigger alarms.
    - A->B**

Only an object crossing the configured line from the A side to the B side can be detected.
    - B->A**

Only an object crossing the configured line from the B side to the A side can be detected.
  - 3) **Optional**: Set **Target Detection** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle.
  - 4) Click **Draw Area** and draw a quadrilateral in the preview window by specifying four vertexes of the detection region.
6. Set the arming schedule. Refer to ***Configure Arming Schedule*** for details.
7. Set the linkage actions. Refer to ***Configure Alarm Linkage Action*** for details.
8. Click **Apply**.

## Intrusion Detection

Intrusion detection function detects people, vehicles, or objects that enter and loiter in a pre-defined virtual region.

### Steps

1. Go to **Configuration → Event → Smart Event → Intrusion** .

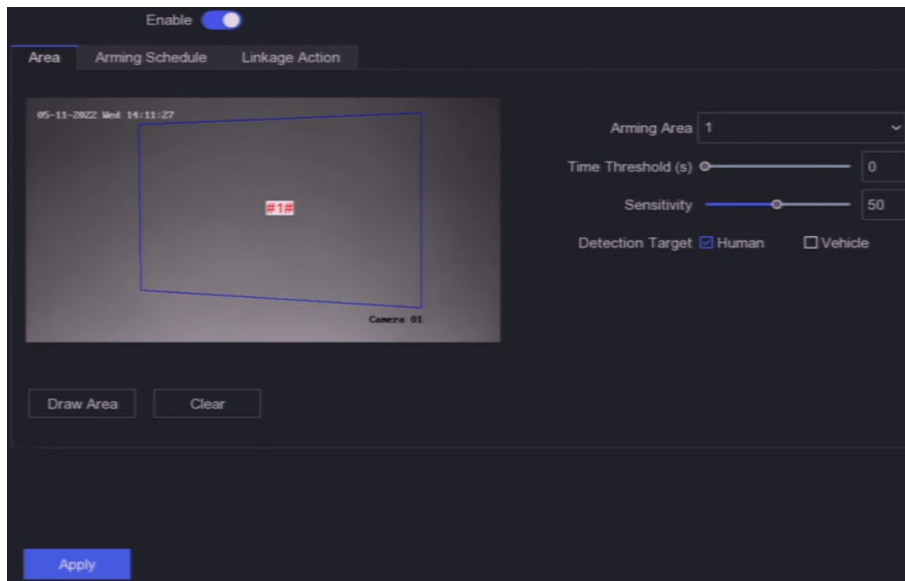


Figure 6-22 Intrusion Detection

2. Set **Camera**.
3. Turn on **Enable**.
4. **Optional:** Check **Save VCA Picture** to save the captured pictures of VCA detection.
5. Set the detection rules and detection areas.
  - 1) Set **Arming Area**. Up to 4 arming areas are selectable.
  - 2) Adjust **Time Threshold** and **Sensitivity**.

#### Sensitivity

The size of the object that can trigger the alarm. The higher the value is, the more easily the detection alarm will be triggered. Its range is [1-100].

#### Time Threshold

Range [1s-10s], the threshold for the time of the object loitering in the region. When the duration of the object in the defined detection area is longer than the set time, the alarm will be triggered.

- 3) **Optional:** Set **Target Detection** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle.
  - 4) Click **Draw Area** and draw a quadrilateral in the preview window by specifying four vertexes of the detection region.
6. Set the arming schedule. Refer to ***Configure Arming Schedule*** for details.

7. Set the linkage actions. Refer to [Configure Alarm Linkage Action](#) for details.
8. Click **Apply**.

## Region Entrance Detection

Region entrance detection function detects people, vehicles or other objects which enter a pre-defined virtual region from the outside place, and some certain actions can be taken when the alarm is triggered.

### Steps

1. Go to **Configuration → Event → Smart Event → Region Entrance** .

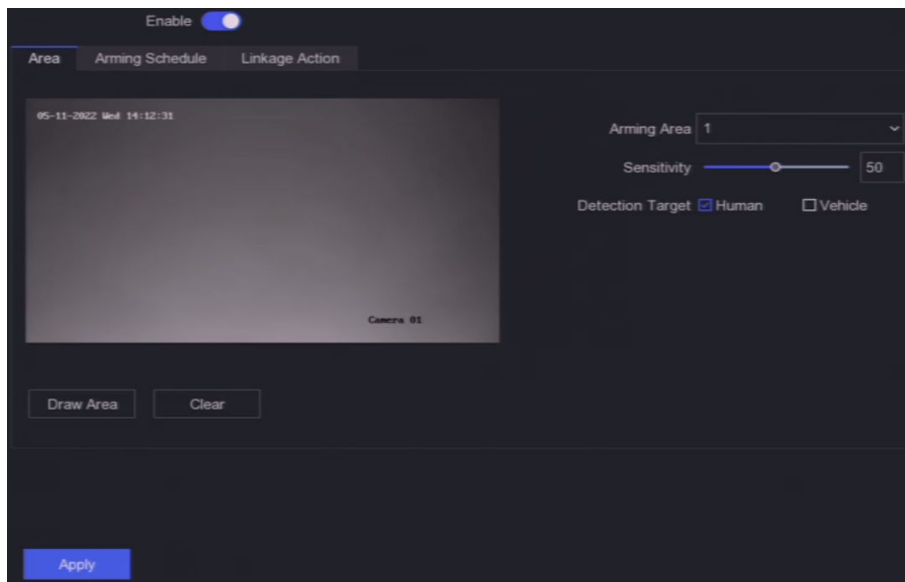


Figure 6-23 Region Entrance Detection

2. Set **Camera**.
3. Turn on **Enable**.
4. **Optional:** Check **Save VCA Picture** to save the captured pictures of VCA detection.
5. Set the detection rules and detection areas.
  - 1) Set **Arming Area**. Up to 4 arming areas are selectable.
  - 2) Adjust **Sensitivity**. **Sensitivity:** Range [0-100]. The higher the value is, the more easily the detection alarm can be triggered.
  - 3) **Optional:** Set **Target Detection** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle.
  - 4) Click **Draw Area** and draw a quadrilateral in the preview window by specifying four vertexes of the detection region.
6. Set the arming schedule. Refer to [Configure Arming Schedule](#) for details.
7. Set the linkage actions. Refer to [Configure Alarm Linkage Action](#) for details.
8. Click **Apply**.

## Region Exiting Detection

Region exiting detection function detects people, vehicles or other objects which exit from a pre-defined virtual region, and some certain actions can be taken when the alarm is triggered.

### Steps

1. Go to **Configuration → Event → Smart Event → Region Exiting** .

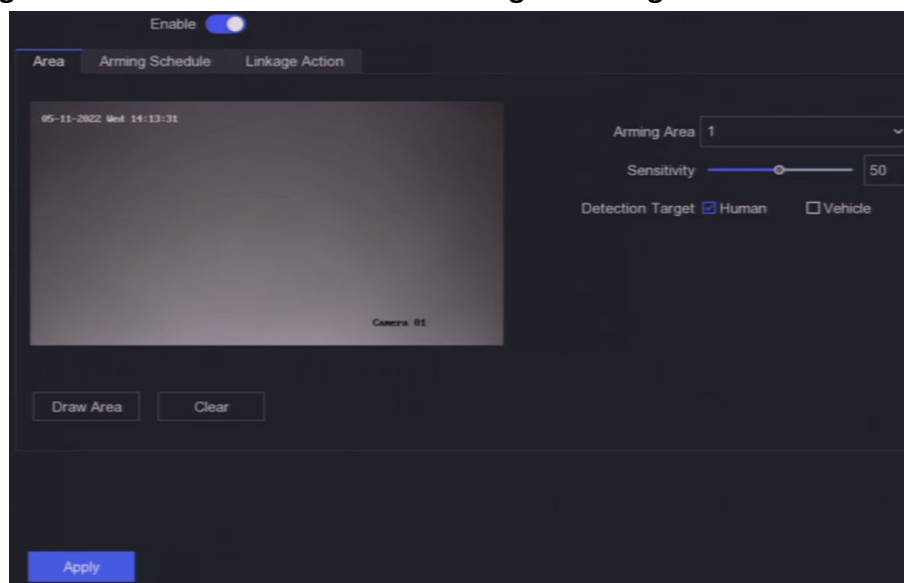


Figure 6-24 Region Exiting Detection

2. Set **Camera**.
3. Turn on **Enable**.
4. **Optional:** Check **Save VCA Picture** to save the captured pictures of VCA detection.
5. Set the detection rules and detection areas.
  - 1) Set **Arming Area**. Up to 4 arming areas are selectable.
  - 2) Adjust **Sensitivity**. **Sensitivity:** Range [0-100]. The higher the value is, the more easily the detection alarm can be triggered.
  - 3) **Optional:** Set **Target Detection** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle.
  - 4) Click **Draw Area** and draw a quadrilateral in the preview window by specifying four vertexes of the detection region.
6. Set the arming schedule. Refer to ***Configure Arming Schedule*** for details.
7. Set the linkage actions. Refer to ***Configure Alarm Linkage Action*** for details.
8. Click **Apply**.



### Temperature Screening

After specified thermography cameras are connected, the device can display temperature measurement results, and notify you with audio alert when normal or abnormal temperature is detected.

#### Before You Start

Ensure your thermography camera supports this function, and it is properly configured.

#### Steps


1. Go to **Configuration** → **Event** → **Smart Event** .
2. Select the optical channel of thermography camera.
3. Click **Face Detection**.
4. Set **Alarm Temperature**. When the detected temperature exceeds the alarm temperature, the device will trigger an alarm.
5. Set **Sensitivity**.

#### Sensitivity

It refers to face detection sensitivity.

6. Set the arming schedule. Refer to **Configure Arming Schedule** for details.
7. Set the linkage actions. Refer to **Configure Alarm Linkage Action** for details.
8. Click **Apply**.

#### What to do next

- You can click  in live view to view detection results. Normal temperature will be displayed in green color, abnormal temperature will be displayed in red color.
- You can click **Search** at the top to search related files.

### Thermal Camera Detection

The device supports the event detection modes of thermal network cameras: fire detection, temperature detection, etc. You can configure the arming schedule and linkage actions of the selected event.

#### Before You Start

Add a thermal network camera to your device and make sure the camera is activated.

#### Steps

1. Go to **Configuration** → **Event** → **Smart Event** .
2. Select a thermal camera detection event.
3. Set **Camera**.
4. Set the arming schedule. Refer to **Configure Arming Schedule** for details.
5. Set the linkage actions. Refer to **Configure Alarm Linkage Action** for details.
6. Click **Apply**.

## 6.4.3 Configure Arming Schedule

### Steps

1. Click **Arming Schedule**.
2. Choose one day of a week and set the time segment. Up to eight time periods can be set within each day.



### Note

Time periods shall not be repeated or overlapped.

---

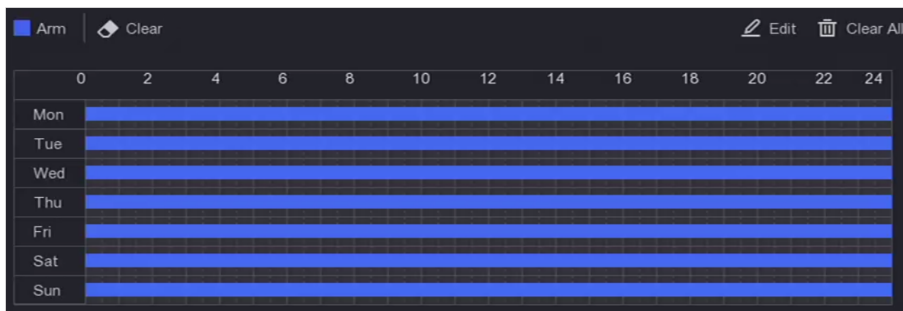


Figure 6-25 Set Arming Schedule

3. Click **Apply**.

## 6.4.4 Configure Alarm Linkage Action

### Configure Alarm Pop-up Window

When an alarm is triggered, the local monitor displays in full screen the video image from the alarming channel configured for full screen monitoring. And when the alarm is triggered simultaneously in several channels, you must configure the auto-switch dwell time.

### Steps

1. Go to **Configuration → System → Live View → General**.
2. Set the event output and dwell time.

#### Alarm Pop-up Output

Select the output to show event video.

#### Alarm Pop-up Delay

Set the time in seconds to show alarm event image. If alarms are triggered simultaneously in several channels, their full-screen images will be switched at an interval of 10 seconds (default dwell time).

3. Click **Linkage Action** of the alarm detection.
4. Select **Alarm Pop-up Window** alarm linkage action.
5. Select the channel(s) in Trigger Channel settings you want to make full screen monitoring.



Auto-switch will terminate once the alarm stops and back to the live view interface.

---

## Configure Buzzer Alarm

The audio warning enables the video recorder to trigger an audible beep when an alarm is detected.

### Steps

1. Go to **Configuration → System → Live View → General** .
2. Turn on **Audio**, and set **Volume**.
3. Go to **Linkage Action** interface of the alarm detection.
4. Select **Buzzer Alarm** linkage action.

## Notify Surveillance Center

The video recorder can send an exception or alarm signal to the remote alarm host when an event occurs. The alarm host refers to the computer installed with client software (e.g., iVMS-4200, iVMS-5200).

### Steps

1. Go to **Configuration → Network → General → More Settings** .
2. Set **Alarm Host IP** and **Alarm Host Port**.
3. Go to Linkage Action interface of the alarm detection.
4. Select **Notify Surveillance Center**.

## Configure Email Linkage

The video recorder can send an email with alarm information to a user or users when an alarm is detected.

### Steps

1. Go to **Configuration → Network → Email** .
2. Configure the settings.
3. Go to Linkage Action interface of the alarm detection.
4. Select **Send Email** as alarm linkage action.

## Configure Audio Alert


When an alarm is triggered, an audio file will be played as the linkage action.

## Steps

### Note

This linkage action is only available for certain events and models.

---

1. Check **Audio Alert** in **Normal Linkage**.
2. Click  to set audio for each event.
3. Click **OK**.

## Trigger Alarm Output

The alarm output can be triggered by the normal and smart events.

### Steps

1. Go to **Linkage Action** interface of the alarm input or event detection.
2. Click **Trigger Alarm Output**.
3. Select the alarm outputs to trigger.
4. Go to **Configuration** → **Event** → **Normal Event** → **Alarm Output** .
5. Select an alarm output item from the list. Refer to [Alarm Output](#) for details.

## Configure PTZ Linkage

Video recorder can trigger the PTZ actions (e.g., call preset/patrol/pattern) when the alarm event, or VCA detection events occur.

### Steps

1. Go to **Linkage Action** interface of the alarm input or VCA detection.
2. Select **PTZ Linkage**.
3. Select the camera to perform the PTZ actions.
4. Select the preset/patrol/pattern No. to call when the alarm events occur.

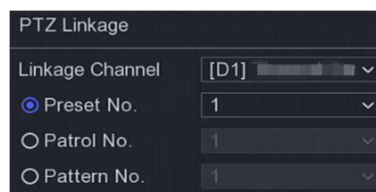


Figure 6-26 PTZ Linkage

### Note

You can set one PTZ type only for the linkage action each time.

---

## Configure Audio and Light Alarm Linkage

For certain network cameras, you can set the alarm linkage action as audio alarm or light alarm.

### Before You Start

- Ensure your camera supports audio and light alarm linkage.
- Ensure the audio output and volume are properly configured.

### Steps

1. Click **Linkage Action**.
2. Select audio or light as your desire.
3. Click **Apply**.



If you require to set audio and light parameters, please log into the network camera via web browser to configure them.

---

## 6.5 Recording Management

### 6.5.1 Configure Recording Schedule

Video recorder will automatically start/stop recording according to the configured schedule.

### Configure Continuous Recording

#### Steps

1. Go to **Configuration → Record → Parameter** .
2. Set the continuous main stream/sub-stream recording parameters for the camera.
3. Go to **Configuration → Record → Schedule** .
4. Select recording type as **Continuous**.

### Configure Event Recording

You can configure the recording triggered by the normal event or smart event.

#### Steps

1. Go to **Configuration → Event** .
2. Configure the event detection and select the cameras to trigger the recording when event occurs.
3. Go to **Configuration → Record → Parameter** .
4. Set the continuous main stream/sub-stream recording parameters for the camera.

5. Go to **Configuration** → **Record** → **Schedule** .
6. Select recording type as **Event**.

## Edit Schedule

### Steps

1. Go to **Configuration** → **Record** → **Schedule** .



Figure 6-27 Recording Schedule

### Continuous

Continuous recording.

### Event

Recording triggered by all event triggered alarms.

2. Select a camera in **Camera No.**
3. Turn on **Enable**.
4. Configure the recording schedule.
  - 1) Click **Edit**.
  - 2) Select a day to configure in **Weekday**.
  - 3) To set an all-day recording schedule, check **All Day** and select schedule **Type**.
  - 4) To set other schedules, uncheck **All Day** and set **Start/End time** and schedule **Type**.

---

#### Note

Up to 8 periods can be configured for each day. And the time periods cannot be overlapped with each other.

- 5) Click **OK** to save the settings and go back to upper level menu.

---

#### Note

You can also select schedule type as **Continuous** or **Event**, and drag the cursor on the desired period to draw a colored bar.

5. Click **Advanced** to set advanced parameters.

### Record Audio

Audio will be record to the video file.

## Pre-Record

The time you set to record before the scheduled time or event. For example, when an alarm triggers the recording at 10:00, and if you set the pre-record time as 5 seconds, the camera records at 9:59:55.

## Post-Record


The time you set to record after the event or the scheduled time. For example, when an alarm triggered recording ends at 11:00, and if you set the post-record time as 5 seconds, it records till 11:00:05.

## Stream Type

Main stream and sub-stream are selectable for recording. When you select sub-stream, you can record for a longer time with the same storage space.

## Video/Picture Expired Time

The expired time is period for a recorded file to be kept in the HDD. When the deadline is reached, the file will be deleted. If you set the expired time to 0, the file will not be deleted. The actual keeping time for the file should be determined by the capacity of the HDD.

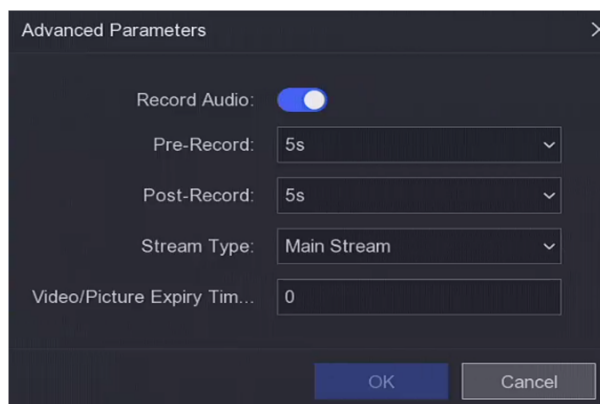

**Figure 6-28 Advanced Parameters**

6. Click **OK** to save the advanced settings.
7. Click **Apply**.

## 6.5.2 Configure Recording Parameter

### Steps

1. Go to **Configuration** → **Record** → **Parameter** to configure camera main stream and sub-stream parameters.
2. Configure recording parameters.

### Main Stream

Main stream refers to the primary stream that affects data recorded to the hard disk drive and will directly determine your video quality and image size. Comparing with the sub-stream, the main stream provides a higher quality video with higher resolution and frame rate.

### **Sub-Stream**

Sub-stream is a second codec that runs alongside the mainstream. It allows you to reduce the outgoing internet bandwidth without sacrificing your direct recording quality. Sub-stream is often exclusively used by smartphone applications to view live video. Users with limited internet speeds may benefit most from this setting.

### **Frame Rate**

Frame rate refers to how many frames are captured each second. A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout.

### **Resolution**

Image resolution is a measure of how much detail a digital image can hold: the greater the resolution, the greater the level of detail. Resolution can be specified as the number of pixel-columns (width) by the number of pixel-rows (height), for example, 1024 × 768.

### **Bitrate**

The bit rate (in Kbit/s or Mbit/s) is often referred to as speed, but actually defines the number of bits/time unit and not distance/time unit.

### **Enable H.264+/Enable H.265+**

The H.264+/H.265+ mode helps to ensure the high video quality with a lowered bitrate. It can effectively reduce the need of bandwidth and HDD storage space.

3. Click **Apply**.

## **6.5.3 Storage Device**

### **Initialize HDD**

If it is the first time you use your HDD, please initialize it after it is installed.

#### **Before You Start**

Install at least an HDD to your video recorder.

#### **Steps**


1. Go to **Configuration → Record → Storage** .
2. Select an HDD.
3. Click **Init**.




## Add Network Disk

You can add the allocated NAS or IP SAN disk to the video recorder, and use it as a network HDD.

### Steps

1. Go to **Configuration** → **Record** → **Storage** .
2. Click **Add**.
3. Set **NetHDD**.
4. Set **Type** as **NAS** or **IP SAN**.
5. Enter NetHDD IP address.
6. Click  to search the available disks.

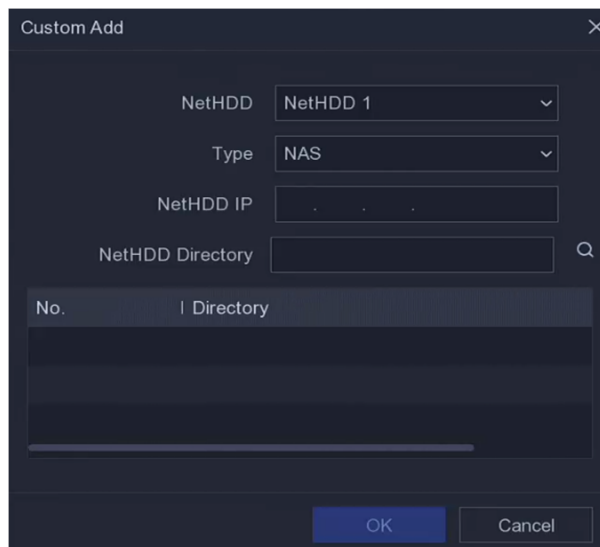

**Figure 6-29 Add NetHDD**

7. Select NAS disk from the list, or manually enter the directory in **NetHDD Directory**.
8. Click **OK**.

---

### **Note**

Up to 8 TB storage capacity is allowed for each network disk.

---

### Result

The added network disks will be displayed in the storage device list.

## 6.5.4 Configure Storage Mode

### Configure HDD Groups

Multiple HDDs can be managed in groups. Video from specified channels can be recorded onto a particular HDD group through HDD settings.

#### Steps

---

#### Note

This function is only available for certain models.

---

1. Go to **Configuration** → **Record** → **Storage Mode** .
2. Select **Mode** as **Group**.
3. Select a group number.
4. Select IP cameras to record on the HDD group.

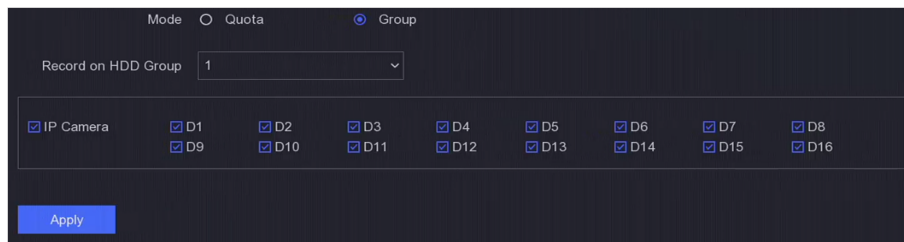



Figure 6-30 Group

5. Click **Apply**.
6. Restart the video recorder to activate the new storage mode settings.
7. After restart, go to **Configuration** → **Record** → **Storage** .
8. Click  of desired HDD to set the group.
9. Select a group number for the current HDD.
10. Click **OK**.

---

#### Note

Regroup the cameras for HDD if the HDD group number is changed.


---

### Configure HDD Quota

Each camera can be configured with an allocated quota for storing videos.

#### Steps

1. Go to **Configuration** → **Record** → **Storage Mode** .
2. Set **Mode** as **Quota**.
3. Select a camera to set quota in **Camera**.
4. Enter the storage capacity in **Record Capacity**.

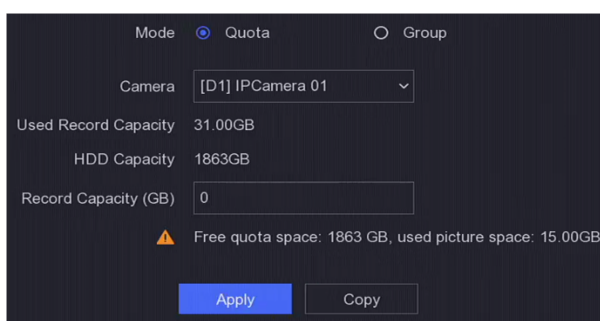

**Figure 6-31 Quota**

---

### Note

When the quota capacity is set to 0, all cameras will use the total capacity of HDD for videos and pictures.

5. Click **Apply**.
6. Restart the video recorder to activate the new settings.

## 6.5.5 Advanced Settings

### Steps

1. Go to **Configuration** → **Record** → **Advanced** .
2. Configure the parameters as your desire.

#### Overwrite

- Disable: When the HDD is full, video recorder will stop writing.
- Enable: When hard drive is full, video record will continue to write new files by deleting the oldest files.

#### Enable HDD Sleeping

HDDs which are free of working for a long time will turn into sleep status.

#### Save Camera VCA Data

Camera VCA data will be saved so that you can search it.

#### Alarm Storage

When the HDD free space is not enough, you can disable it to save space, but your device will stop storing alarm information.

#### Picture Storage


When the HDD free space is not enough, you can disable it to save space, but your device will stop storing pictures.

## 6.6 Wi-Fi

The device can work as a wireless network router.

### Steps

1. Go to **Configuration** → **Wi-Fi** .

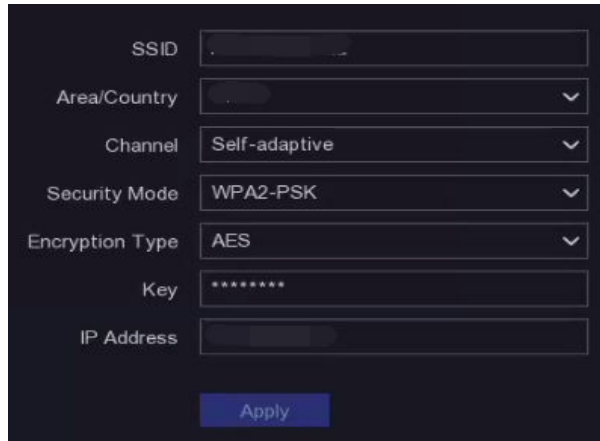

**Figure 6-32 Wi-Fi Settings**

2. Configure following wireless network parameters.

#### **SSID**

It is the short for Service Set Identifier. SSID is the Wi-Fi name provided by the device.

#### **Area/Country**

Select where the router is used.

#### **Channel**

Select the best channel according to your situation.

#### **Bandwidth**

Select the bandwidth mode.

#### **Security Mode**

Select the security protocol for the wireless network.

#### **Encryption Type**

It is used to protect information.

#### **Key**

Enter the encryption key.

#### **IP Address**


Enter the Wi-Fi IP address.

3. Click **Apply** to save the settings.

## Chapter 7 Maintenance

### 7.1 Restore Default

#### Steps

1. Click  at the upper-right corner.
2. Select the restoring type.

#### Simple Restore

Restore all parameters, except the network (including IP address, subnet mask, gateway, MTU, NIC working mode, default route, server port, etc.) and user account parameters, to the factory default settings.

#### Factory Defaults

Restore all parameters to the factory default settings.

#### Restore to Inactive


Restore the device to the inactive status, and leave all settings unchanged except restoring user accounts.

3. Click **Yes**. The device will reboot automatically.

### 7.2 Search Log


The operation, alarm, exception and information of video recorder can be stored in logs, which can be viewed and exported at any time.

#### Steps

1. Click  at the upper-right corner.
2. Click **More**.
3. Click **Log Information**.
4. Set the search conditions.
5. Click **Search**.

### 7.3 System Service

#### Steps

1. Click  at the upper-right corner.
2. Click **More**.
3. Click **System Service**.
4. Configure the parameters as your desire.

#### RTSP

You can specifically secure the stream data of live view by setting the RTSP authentication.

### RTSP Authentication

Two authentication types are selectable, if you select **digest**, only the request with digest authentication can access the video stream by the RTSP protocol via the IP address. For security reasons, it is recommended to select **digest** as the authentication type.

### ISAPI

ISAPI (Internet Server Application Programming Interface) is an open protocol based on HTTP, which can realize the communication between the system devices (e.g., network camera, NVR, etc.). The video recorder is used as a server, the system can find and connect the video recorder.


### HTTP

The admin user account can disable the HTTP service from the GUI or the web browser. After the HTTP is disabled, all the related services, including ISAPI and ONVIF, will terminate as well.

### HTTP Authentication

If you need to enable the HTTP service, you can set the HTTP authentication to enhance the access security. Two authentication types are selectable. For security reasons, it is recommended to select **digest** as the authentication type.

### Camera Added Detection

The function detects the network camera status. If the network camera has been added by another video recorder, the network camera status will show as  in **Online Device** list.

5. Click **Apply**.

## 7.4 Upgrade

---



### Warning

Do not shutdown or turn off the power during upgrade.



---

### 7.4.1 Local Upgrade

#### Before You Start

Store the upgrade firmware to a backup device, and connect it to your device.

#### Steps

1. Click  at the upper-right corner.
2. Click .
3. Click **Local Upgrade**.
4. Select a backup device in **Device Name**.
5. Select the upgrade firmware.
6. Click **Upgrade**. Your device will reboot automatically.



## 7.4.2 Online Upgrade

Upgrade the device with the latest online firmware.

### Before You Start

Ensure Hik-Connect is enabled and properly configured. Refer to ***Hik-Connect*** for details.

### Steps

1. Click  at the upper-right corner.
2. Click .
3. Go to **Online Upgrade**.
4. Download the latest firmware.

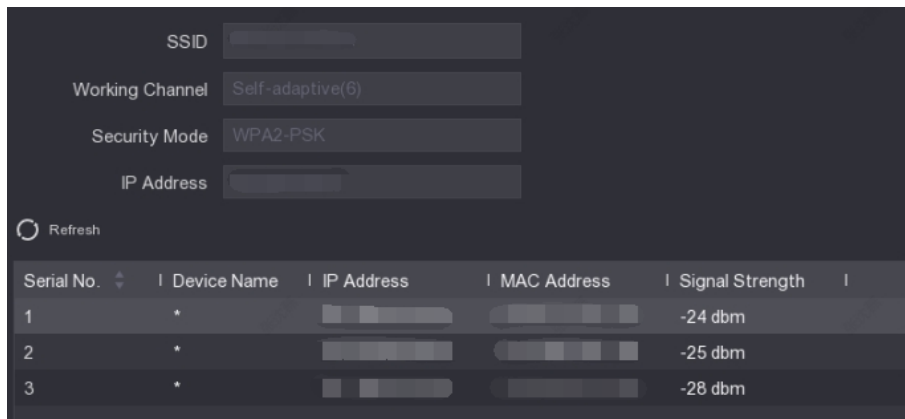
**Auto Download** The will automatically check and download the latest firmware.

**Test Upgrade** Click **Test Upgrade** to manually check and download the latest firmware.

5. Upgrade your device if a new firmware version is available. The device will reboot automatically.

## 7.5 View Wi-Fi Information

You can view Wi-Fi camera signal strength and other Wi-Fi information in **Maintenance → More Operation → Wi-Fi**.



The screenshot displays the Wi-Fi configuration and monitoring interface. At the top, there are four settings: SSID (redacted), Working Channel (Self-adaptive(6)), Security Mode (WPA2-PSK), and IP Address (redacted). Below these settings is a 'Refresh' button. The main part of the interface is a table with the following columns: Serial No., Device Name, IP Address, MAC Address, and Signal Strength. The table contains three rows of data, each with a device name redacted by an asterisk.

Serial No.	Device Name	IP Address	MAC Address	Signal Strength
1	*	[redacted]	[redacted]	-24 dbm
2	*	[redacted]	[redacted]	-25 dbm
3	*	[redacted]	[redacted]	-28 dbm

Figure 7-1 View Wi-Fi Information


## Chapter 8 Alarm

When events occur, you can view their details in alarm center.

### 8.1 Set Event Hint

Select the events to hint in alarm center.

#### Steps

1. Click  at the upper-right corner.
2. Set **Exception**, **Basic Event**, or **Smart Event** as your desire.

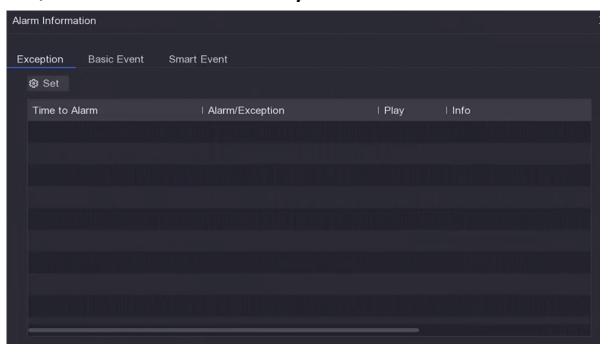





Figure 8-1 Alarm Center

3. Click  and select events to hint.
4. Click **OK**.

When the selected events occur, the alarm information will be displayed in  (locating at the upper-right corner of local menu).

### 8.2 View Alarm in Alarm Center

#### Steps

1. Click  at the upper-right corner of local menu.
2. Click **Exception**, **Basic Event**, or **Smart Event** to view as your desire.



## Chapter 9 Web Operation

### 9.1 Introduction

You can get access to the video recorder via web browser.

You may use one of the following listed web browsers: Internet Explorer 11.0, Apple Safari, Mozilla Firefox, and Google Chrome. The supported resolutions include 1024×768 and above.

For certain models, you will have to download a web component plug-in, and install it. Otherwise, a few functions would be unavailable. The download address is <http://hikdownload.hs7.com/web/webplugin/windows/WebComponents/standard/WebComponents.exe>.

### 9.2 Login

You shall acknowledge that the use of the product with Internet access might be under network security risks. For avoidance of any network attacks and information leakage, please strengthen your own protection. If the product does not work properly, please contact with your dealer or the nearest service center.

#### Steps

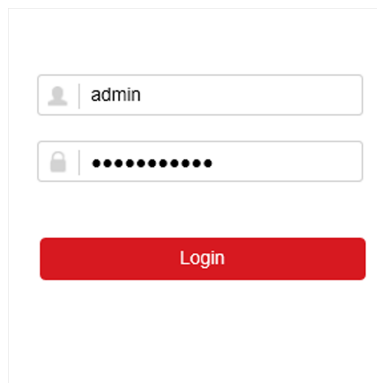
1. Open web browser, input the IP address of the video recorder and then press **Enter**.



If you have changed HTTP port, enter ***http://IP address:HTTP port*** in address bar. E.g., ***http:192.168.1.64:81***.

---

2. Enter **user name** and **password** in the login interface.
3. Click **Login**.



The screenshot shows a login form with two input fields and a button. The first field is for the user name, containing the text 'admin'. The second field is for the password, with the characters masked by dots. Below the fields is a prominent red button labeled 'Login'.

**Figure 9-1 Login**

4. Follow the installation prompts to install the plug-in.

## Note

You may have to close the web browser to finish the installation of the plug-in.

## 9.3 Live View

After login, live view interface shows.



Figure 9-2 Live View

## 9.4 Playback

Click **Playback** to enter playback interface.

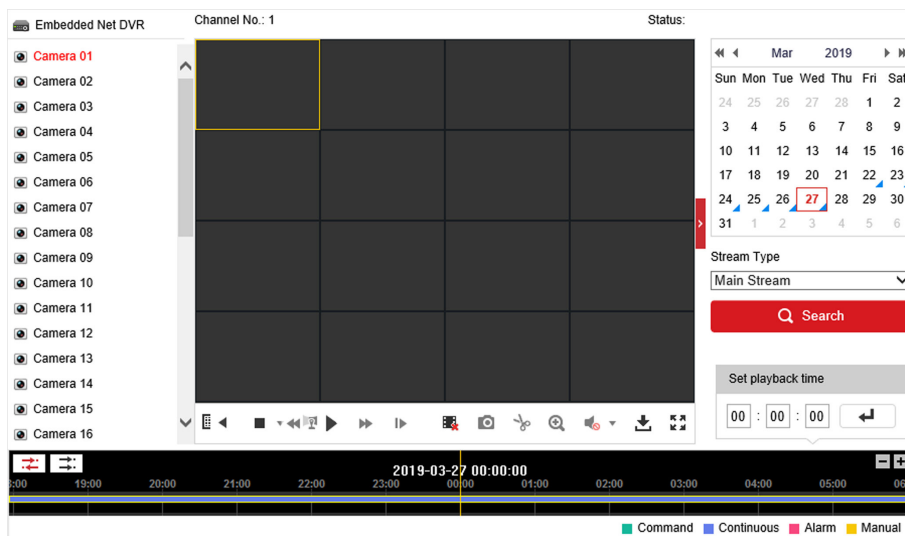


Figure 9-3 Playback

## 9.5 Configuration

Click **Configuration** to enter configuration interface.

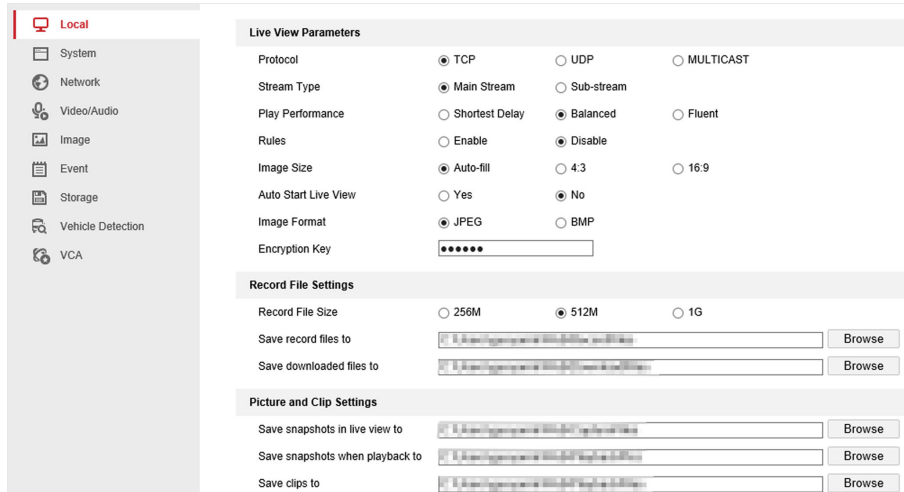


Figure 9-4 Configuration

## 9.6 Log

### Steps

1. Go to **Maintenance** → **System** → **Maintenance** → **Log**.
2. Set the search conditions.
3. Click **Search**.

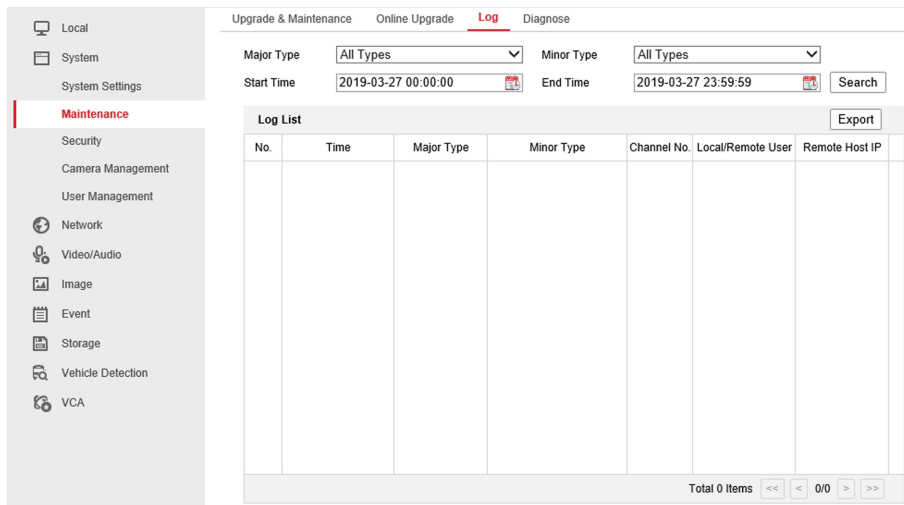


Figure 9-5 Log

## Chapter 10 Appendix

### 10.1 Glossary

#### Dual-Stream

Dual-stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the DVR, with the main stream having a maximum resolution of 1080P and the sub-stream having a maximum resolution of CIF.

#### DVR

Acronym for Digital Video Recorder. A DVR is device that is able to accept video signals from analog cameras, compress the signal and store it on its hard drives.

#### HDD

Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.

#### DHCP

Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.

#### HTTP

Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network.

#### PPPoE

PPPoE, Point-to-Point Protocol over Ethernet, is a network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. It is used mainly with ADSL services where individual users connect to the ADSL transceiver (modem) over Ethernet and in plain Metro Ethernet networks.

#### DDNS

Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.

#### Hybrid DVR

A hybrid DVR is a combination of a DVR and NVR.

#### NTP

Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.

### **NTSC**

Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.

### **NVR**

Acronym for Network Video Recorder. An NVR can be a PC-based or embedded system used for centralized management and storage for IP cameras, IP Domes and other DVRs.

### **PAL**

Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.

### **PTZ**

Acronym for Pan, Tilt, Zoom. PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.

### **USB**

Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

## **10.2 Communication Matrix**

Please scan the QR code below to view the communication matrix document.




**Figure 10-1 Communication Matrix**

## **10.3 Device Command**

Please scan the QR code below to view the device command document.



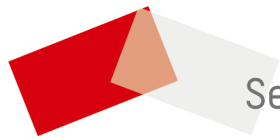**Figure 10-2 Device Command**



See Far, Go Further