



1

FW2-RPT

TWO WAY WIRELESS REPEATER MODULE

ELECTRONIC ENGINEERING LTD.

INSTALLATION INSTRUCTIONS

P/N 7101365 REV.B

2

INTRODUCTION

The FW2-RPT extends your home alarm system data reception and the RSSI range of your connected devices.

It receives alarm, status and control messages from the wireless devices and sends these messages to the control panel.


It is supported by Crow's control panels and RF- Tx/Rx UART Modules.

FEATURES

- Extends the range of Two Way wireless devices
- AC powered with a six-hour battery back-up
- Secure ID 24 Bits encryption
- Continuously measures communication quality
- Compact and Easy to install
- LED indications for activity and power failure
- Frequency Band: 868MHz / 916MHz

3

PRODUCT DESCRIPTION

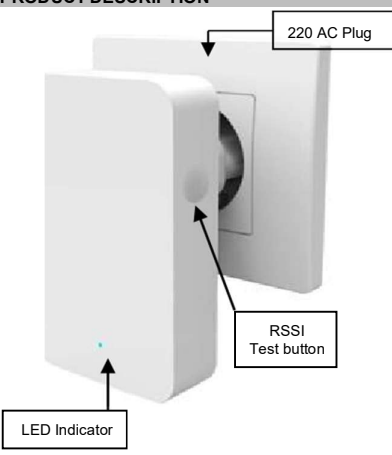

220 AC Plug

RSSI Test button

LED Indicator

4

LEARNING PROCESS

Please refer to your control panel installation manual to learn the FW2-Repeater into your system.

1. Proceed with registration of the FW2-repeater into your control panel.
2. Insert the FW2-RPT into the AC plug (220V)
3. Registration proceed is starting, indicated by RED led on the FW2-RPT

As soon as the FW2-RPT is learned, the message "Complete" is displayed on the control panel and the Red LED stops blinking on the device.

5

TESTING THE FW2-RPT

After learning the FW2-RPT into your control panel, it is recommended to proceed with Transmission and Walk tests.

We suggest you to refer to the "Walk Test Mode" section of your control panel installation manual.

FW2-RPT TRANSMISSION TEST

Push on the "RSSI Test button" located on the right side of the FW2-RPT to initiate a transmission from the device to the control panel.

Check the RSSI level indicated on the control panel display of your control panel to verify the radio reception level.

6

TAMPER TRANSMISSION TEST

Changing any tamper switch state will cause tamper events transmission. Check the RSSI level indicated on the control panel display.

MOTION TRANSMISSION TEST

Walk crossing in front of the detector will generate motion event transmission. Check the RSSI level indicated on the control panel display.

DELETE THE FW2-RPT

In case the FW2-RPT should be removed from the installation, you just have to delete the registration info into your control panel.


Please refer to your control panel manual to remove the FW2-Repeater from the configuration.

7

BATTERY REPLACEMENT

The battery is located behind the cover on the back side of the device.

- Lift the cover locker
- Open the battery cover
- Pull out the old battery
- Insert new battery, verify the correct polarity
- Close the battery cover



CAUTION !!!

RISK OF EXPLOSION IF BATTERY IS REPLACED BY DIFFERENT TYPE / MODEL. PLEASE REFER TO YOUR INSTALLER

8

TECHNICAL SPECIFICATIONS

Data Protocol	FW2 Protocol
Modulation Type	GFSK
Frequency band	8F – 868.35MHz 9F – 916.5MHz
Identification	Unique ID serial number – 24 bit
Events Supported from connected devices	Alarm, Tamper, Supervision, Low Bat
Event Transmission	Low Bat (from FW2-RPT)
Supervision Time	7 min (by default) Configurable between 1 to 30 min
Range (open space)	500m
Operation	100-240VAC, 0.15A, 50-60Hz
Battery Backup	3.7V/250mAh Li-Ion Rechargeable ~ 8 hours back up
Current Consumption	
Average	<30 mA
Transmission Power	up to 14 dBm
Operating temperature	-10°C to +55°C
Dimensions	98mm x 55mmx74mm
Weight (incl. battery)	120 gr.

9





REGULATORY APPROVALS

The FW2-RPT conforms to the essential requirements set out by:

- RED directive: 2014/53/EU
- EMC directive: 2014/30/EU
- LVD directive: 2014/35/EU

Harmonized Standards applicable to this product are:

- EN300220-2
- EN301489-3
- EN301489-1
- EN50130-4:1995+A1(1998)+A2(2003)
- EN61000-6-3
- EN60950-1

10

CROW ELECTRONIC ENGINEERING LTD. ("Crow") - WARRANTY POLICY CERTIFICATE

This Warranty Certificate is given in favor of the purchaser (hereunder the "Purchaser") purchasing the products directly from Crow or from its authorized distributor.

Crow warrants these products to be free from defects in materials and workmanship under normal use and service for a period of 24 months from the last day of the week and year whose numbers are printed on the printed circuit board inside these products (hereunder the "Warranty Period"). Subject to the provisions of this Warranty Certificate, during the Warranty Period, Crow undertakes, at its sole discretion and subject to Crow's procedures, as such procedures are from time to time, to repair or replace, free of charge for materials and/or labor, products proved to be defective in materials or workmanship under normal use and service. Repaired products shall be warranted for the remainder of the original Warranty Period. All transportation costs and in-transit risk of loss or damage related, directly or indirectly, to products returned to Crow for repair or replacement shall be borne solely by the Purchaser.

Crow's warranty under this Warranty Certificate does not cover products that is defective (or shall become defective) due to: (a) alteration of the products (or any part thereof) by anyone other than Crow; (b) accident, abuse, negligence, or improper maintenance; (c) failure caused by a product which Crow did not provide; (d) failure caused by software or hardware which Crow did not provide; (e) use or storage other than in accordance with Crow's specified operating and storage instructions.

There are no warranties, expressed or implied, of merchantability or fitness of the products for a particular purpose or otherwise, which extend beyond the description on the face hereof.

This limited Warranty Certificate is the Purchaser's sole and exclusive remedy against Crow and Crow's sole and exclusive liability toward the Purchaser in connection with the products, including without limitation - for defects or malfunctions of the products. This Warranty Certificate replaces all other warranties and liabilities, whether oral, written, (non-mandatory) statutory, contractual, in tort or otherwise.

In no case shall Crow be liable to anyone for any consequential or incidental damages (inclusive of loss of profit, and whether occasioned by negligence of the Crow or any third party on its behalf) for breach of this or any other warranty, expressed or implied, or upon any other basis of liability whatsoever. Crow does not represent that these products can not be compromised or circumvented; that these products will prevent any person injury or property loss or damage by burglary, robbery, fire or otherwise; or that these products will in all cases provide adequate warning or protection.

Purchaser understands that a property installed and maintained product may in some cases reduce the risk of burglary, fire, robbery or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss or damage as a result.

Consequently, Crow shall have no liability for any personal injury; property damage or any other loss based on claim that these products failed to give any warning.

If Crow is held liable, whether directly or indirectly, for any loss or damage with regards to these products, regardless of cause or origin, Crow's maximum liability shall not in any case exceed the purchase price of these products, which shall be the complete and exclusiv e remedy against Crow.

11



Electronic Engineering Ltd

12 Kineret Street.
Airport City, 70100 Israel

Tel. +972 39726000
Fax. +972 39726001

sales@crow.co.il
support@crow.co.il

www.thecrowgroup.com

These instructions supersede all previous issues in circulation prior to April 2018