User manual

Digital Light / LED Light Meter




 $\underline{ \bigwedge} \ \, \text{Before using the instrument,please read this manual carefully,and save it well for future using.}$

Introduction

Visible light emitted by fluorescent lamp, metal halide lamp, high voltage sodium lamp or incandescent lamp can be measured.

One lux is the light received on the surface of a candle with a vertical intensity of 1 meters and an area of 1 square meters.

One FC is the light received on the surface of a 1 inch square foot at a distance of 1 feet from a candle with a light intensity.

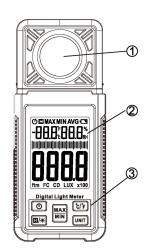

- ① Protective shield light sensor
- 2 Display LCD
- 3 Function key

2

Key Description

Power On/Off key

MAX Max/Min Key

□/☀

°c/°F Temperature unit selection key

Data hold/ backlight key

UNIT unit selection key

Operation

Taking measurements

- Press the button to turn power on.
- 2. Remove the protective cap from the sensor.

3

- 3. Place the sensor in a horizontal position at the measurement location.
- 4. Read the light level on the display.

Caution:

To protect the lens from scratches, keep the protective cap on the sensor whenever the unit is not in use.

Data hold

Press the button to freeze the displayed reading. The 'H' hold icon will appear on the display.

Press the button again to return to normal operation.

MAX/MIN function

- 1. Press the MAX button once to put the meter in MAX/MIN mode. The meter will now display the highest reading that occurs while the function is enabled. The "MAX" icon will appear in the display.
- 2. Press the will button again to display the lowest reading that occurs while the function is enabled. The "MIN" icon will appear in the
- Press again to toggle between the MAX and MIN readings.
- To exit the MAX/MIN mode and return to the 5

normal real time display, press and hold the

button (2 seconds) until the MAX and MIN icons disappear.

Units of measure

Press the UNIT button to select the unit of measure. "LUX" or "FC" will appear in the display.

Power ON and Automatic Power Off

- 1. Press the button to turn the meter on.
- button again to turn the 2. Press the meter off.
- 3. The meter has an automatic power off

6

feature that conserves battery energy. After 10 minutes the meter automatically shuts off.

4. To press and hold the **□**/* button to turn the meter on, the auto power off function will be cancelled. And the icon disappears. (4)

Backlight function

Press and hold <a>[■/*] for about 2 seconds to turn on the backlight, then press and hold

□/★ again to turn off the backlight.

Specifications

	LUX: 1000\10000\200000 FC: 100\1000\20000	
Range / Accuracy	±(3%+5 words) (at 2854°K incandescent lamps) ±(6%+5 words) others Cosine angle deviation characteristics 30° ±2%; 60° ±6%;	
	80° ±25%	
Sensor	Silicon photo-diode and spectral response filter	
Operating conditions	Temperature:0 ~ 40°C —— Humidity:<80%RH Altitude:<2000m	
Storage conditions	Temperature:-10 \sim 50°C $_{\star}$ Humidity:<80%RH	

8

Sampling rate	Approx. 2 times per second	
Spectral range	320~730nm	
Auto power off	10 minutes	
Power	3 x 1.5VAAA batteries	

Temperature & Humidity

specification:			
Temperature	Measuring range	-20.0℃~60.0℃(-4.0 ℉~140.0℉)	
	Accuracy	0.0℃~45.0℃(32°F~1 13°F) ±1.0℃/2.0°F Other: ±1.5°C/3.0°F	
Humidity	Measuring range	0.0% ~99.9%RH	
	Accuracy	20%~80%:±5.0RH Other: ±6.0RH	

Maintenance

Battery Replacement

When the battery voltage is low the 'T' symbol will appear on the display.

7

Replace the three (3) 1.5 'AAA' batteries by removing the rear (center) battery compartment screw and accessing the battery compartment. Observe polarity when placing the batteries in the compartment. Ensure that the compartment cover is securely fastened when finished.

Cleaning and storage

To avoid damaging the instrument housing, do not use corrosive or solvent to clean the instrument.

The white plastic sensor dome should be cleaned with a damp cloth when necessary

Store the meter in an area with moderate temperature and humidity (refer to the operating and storage range in the specifications chart earlier in this manual).





9

10

11